

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.


Charge system with refrigerant and inspect the leakage of refrigerant.

**Specified amount: 1,000 ± 50 g (35.27 ± 1.76 oz.)**

### 2. REMOVE REAR SEAT (See page BO-139)

### 3. REMOVE PACKAGE TRAY TRIM (See page BO-85)

### 4. REMOVE LUGGAGE COMPARTMENT FRONT COVER (See page BO-43)

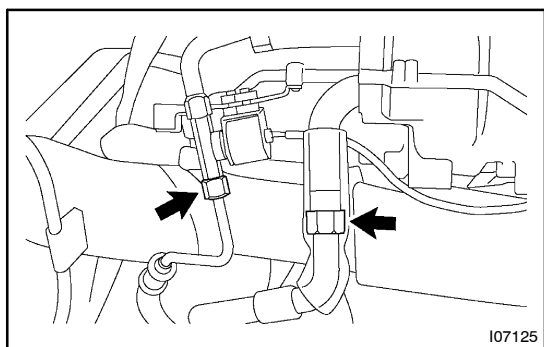

### 5. DISCONNECT LIQUID AND SUCTION TUBES

(a) Using a knife, cut off each packing.

HINT:

At the time of installation, please refer to the following item.

Do not reuse the packing.

(b) Loosen the 2 union nuts and disconnect the both tubes.

**Torque:**

**Liquid tube: 14 N·m (140 kgf·cm, 10 ft·lbf)**

**Suction tube: 23 N·m (235 kgf·cm, 17 ft·lbf)**


**NOTICE:**

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install to the tubes.

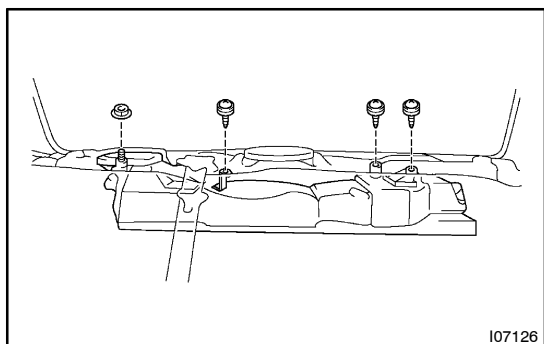

### 6. REMOVE REAR COOLING UNIT

(a) Disconnect the connectors.

(b) Remove the 2 roof side duct.

(c) Remove the 3 bolts and nut.

(d) Pull out the drain hose and remove the rear cooling unit.