


REMOVAL

1. REMOVE INSTRUMENT PANEL (See page BO-96)

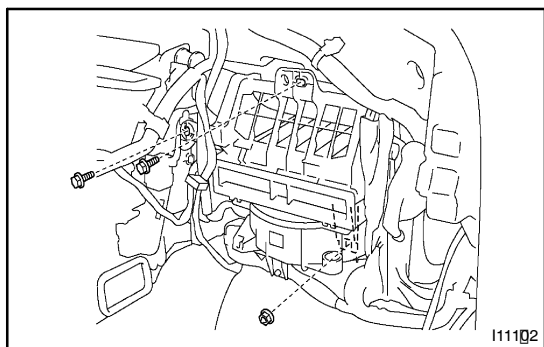

2. REMOVE BLOWER UNIT

- (a) Disconnect the connectors.
- (b) Remove the nut and disconnect the wire harness bracket.
- (c) Remove the screw and connect bracket.
- (d) Remove the 2 bolts, nut, and blower unit.