


REMOVAL

1. REMOVE FRONT WHEEL

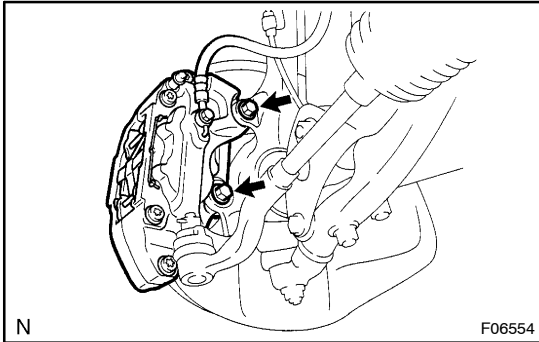


2. REMOVE BRAKE CALIPER

(a) Remove the 2 bolts and brake caliper.

(b) Support the brake caliper securely.

3. DISCONNECT TIE ROD END FROM LOWER BALL JOINT

(a) Remove the clip and nut from the tie rod end.

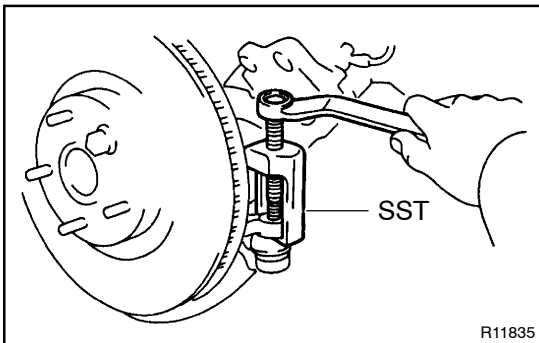


(b) Using SST, disconnect the tie rod end from the lower ball joint.

SST 09610-20012

4. DISCONNECT LOWER BALL JOINT FROM LOWER SUSPENSION ARM

(a) Remove the cotter pin and nut from the lower ball joint.

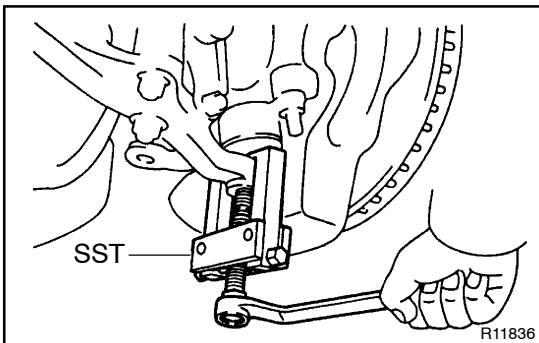

(b) Using SST, disconnect the lower ball joint from the lower suspension arm.

SST 09628-62011

5. REMOVE LOWER BALL JOINT FROM STEERING KNUCKLE

Remove the 2 bolts and lower ball joint.

