

INSTALLATION

1. INSTALL UPPER SUSPENSION ARM

- (a) Install a bolt and 2 nuts to the axle carrier and secure it in a vise.
- (b) Install the upper suspension arm to the axle carrier.
- (c) Install a new nut.

Torque: 108 N·m (1,100 kgf·cm, 80 ft·lbf)

2. INSTALL REAR AXLE CARRIER WITH UPPER SUSPENSION ARM (See page SA-58)

3. CHECK REAR WHEEL ALIGNMENT (See page SA-9)

4. CHECK ABS SPEED SENSOR SIGNAL (See page DI-153)