



REMOVAL


1. REMOVE FRONT BUMPER COVER
(See [page BO-4](#))

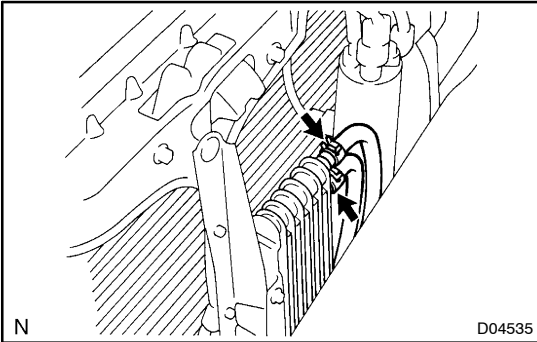


2. REMOVE OIL COOLER
 - (a) Loosen the 2 clips and disconnect the 2 hoses.

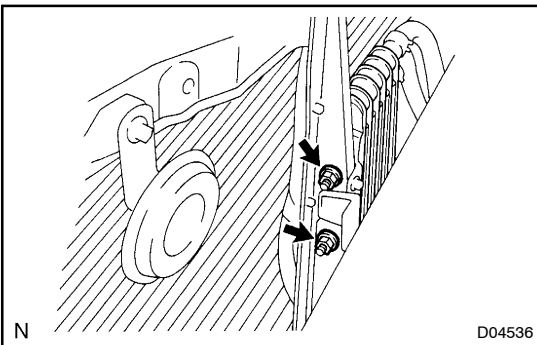


- (b) Remove the 2 nuts and oil cooler.

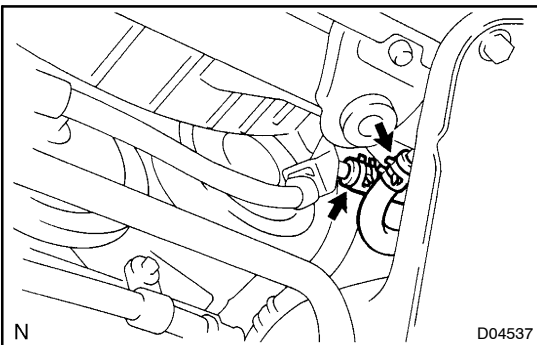

3. REMOVE OIL COOLER PIPE
 - (a) Loosen the 2 clips and disconnect the 2 hoses.

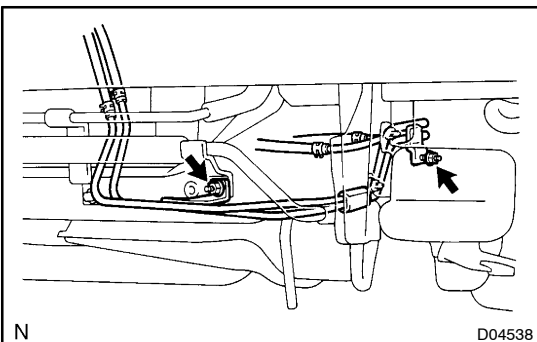

- (b) Remove the 2 nuts and oil cooler pipe.

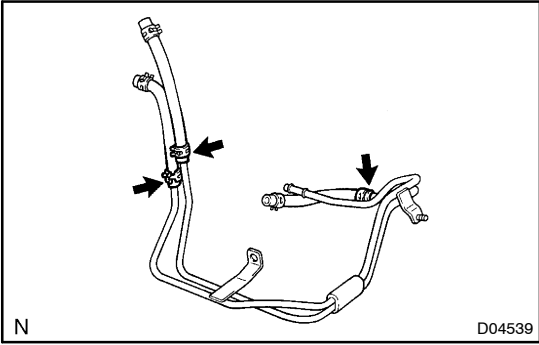

(c) Loosen the 3 clips and disconnect the 3 hoses.