


## REAR COOLING UNIT ON-VEHICLE INSPECTION

AC259-01

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE LUGGAGE COMPARTMENT DOOR STRIKER COVER
3. REMOVE COMPARTMENT TRIM REAR COVER
4. REMOVE SIDE TRIM TOOL BAG COVER
5. REMOVE LUGGAGE COMPARTMENT TRIM COVERS
6. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVERS
7. REMOVE LUGGAGE COMPARTMENT LIGHT
8. REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER

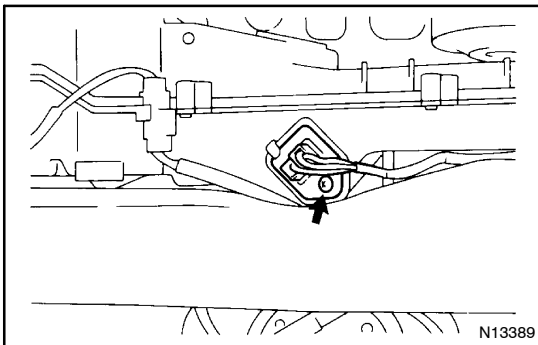

### 9. INSPECT FOR LEAKAGE OF REFRIGERANT

- (a) Remove the blower resistor.
  - (1) Disconnect the connector.
  - (2) Remove the screw and blower resistor.
- (b) Using a gas leak detector, check for leakage.

If there is leakage, check the tightening torque at the joints or check the evaporator.