


EFI MAIN RELAY INSPECTION

SF11K-01

1. REMOVE EFI MAIN RELAY (Marking: EFI)

LOCATION: In the engine compartment relay box.

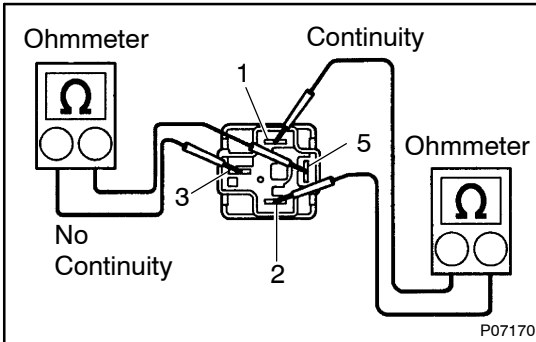


2. INSPECT EFI MAIN RELAY CONTINUITY

- (a) Using an ohmmeter, check that continuity exists between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that no continuity exists between terminals 3 and 5.

If there is continuity, replace the relay.

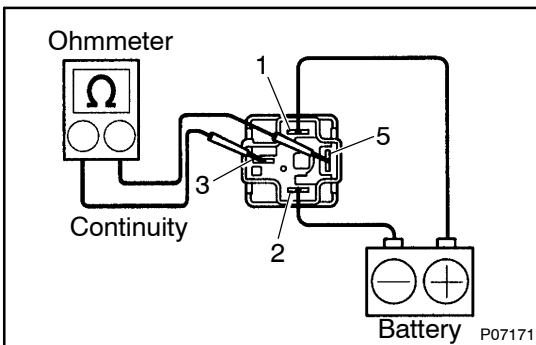

3. INSPECT EFI MAIN RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that continuity exists between terminals 3 and 5.

If no continuity exists, replace the relay.

4. REINSTALL EFI MAIN RELAY