

9. Water temperature gauge stays at the same position or does not function correctly.

INSPECTION PROCEDURE

1 Check of water temperature sender gauge.

CHECK:

Does water temperature sender gauge function normally? (See page BE-61)

No

Faulty water temperature sender gauge.

Yes

2 Check of water temperature receiver gauge.

CHECK:

Does water temperature receiver gauge function normally? (See page BE-61)

Or, are there any loose meter ECU tightening screws No. 1 to 5?

No

Faulty water temperature receiver gauge.

Yes

3 Wiring harness check.

CHECK:

Is there continuity between vehicle side connector A10 (E/G ground) terminal and body ground after disconnecting meter connector A?

No

Faulty wiring harness.

Yes

Faulty meter ECU.