



REMOVAL

1. REMOVE WIPER ARMS
2. REMOVE HOOD TO COWL TOP SEAL
3. REMOVE COWL TOP VENTILATOR LOUVERS

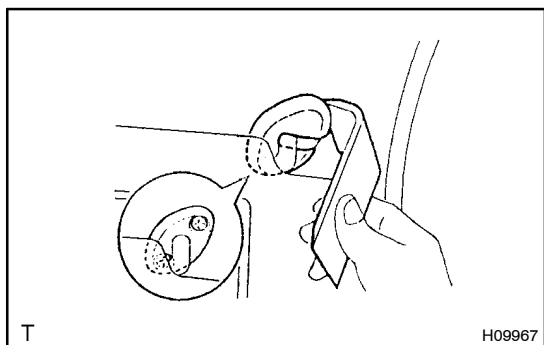


4. REMOVE SUN VISOR

- (a) Using a moulding remover, remove the visor arm case.
- (b) Remove the 2 screws and sun visor.
- (c) Employ the same manner described above to the other side.

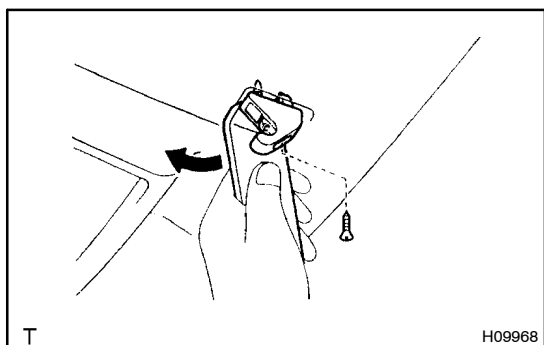


5. REMOVE VISOR HOLDER

- (a) Remove the screw.
- (b) Using a moulding remover, remove the visor holder.
- (c) Employ the same manner described above to the other side.

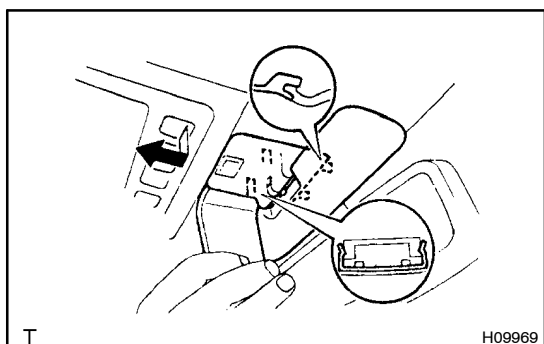


6. REMOVE CENTER VISOR ASSEMBLY

Using a moulding remover, remove the center visor assembly as shown in the illustration.

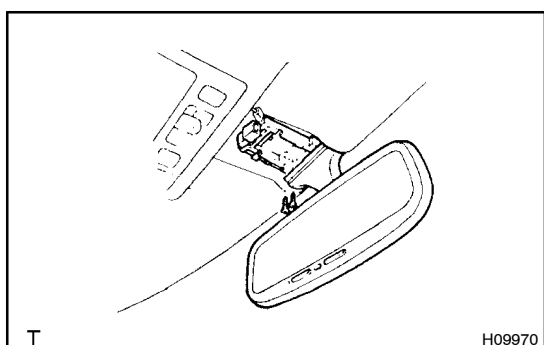

7. REMOVE INNER REAR VIEW MIRROR

Remove the 2 screws and inner rear view mirror, then disconnect the connector.

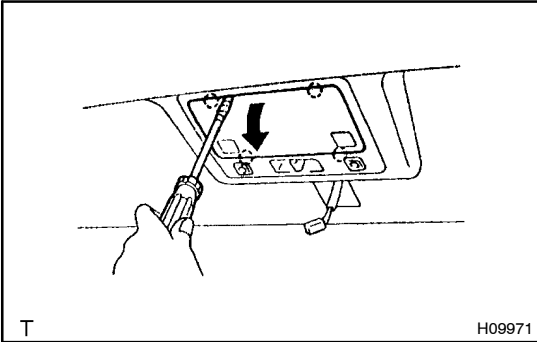
**8. REMOVE MAP LIGHT ASSEMBLY**

- (a) Using a screwdriver, remove the map light lens.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and map light assembly, then disconnect the connector.

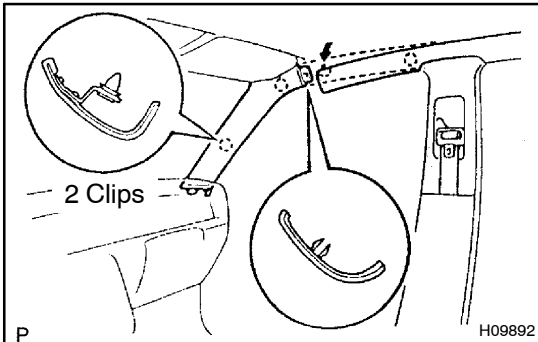**9. REMOVE FRONT PILLAR GARNISH**

- (a) Disengage the clip at the lead edge of roof side inner rail.
- (b) Disengage the clips, remove the front pillar garnish by pulling up.
- (c) Employ the same manner described above to the other side.

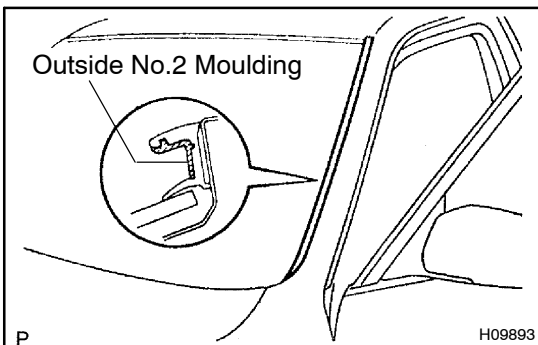
**10. REMOVE WINDSHIELD OUTSIDE NO.2 MOULDING**

- (a) Using a screwdriver, remove the windshield outside No.2 moulding.


HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

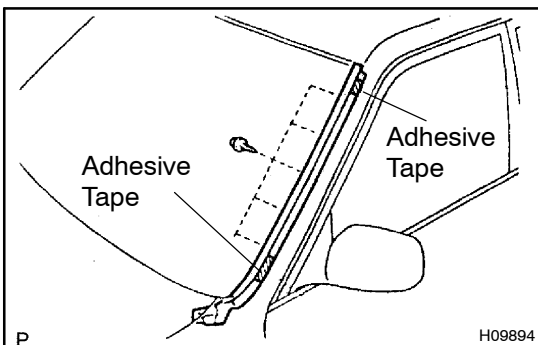**11. REMOVE WINDSHIELD OUTSIDE MOULDING**

- (a) Remove the 5 screws.
- (b) Slowly remove the moulding while separating the adhesive tapes.
- (c) Employ the same manner described above to the other side.

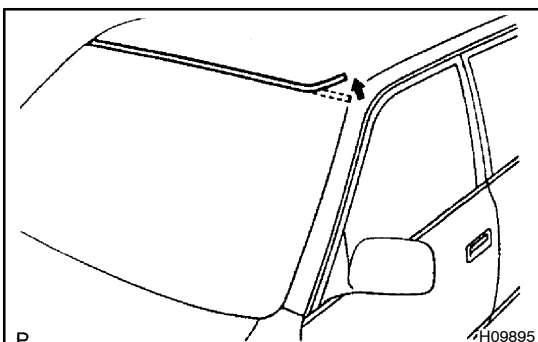**12. REMOVE WINDSHIELD OUTSIDE UPPER MOULDING**

Manually peel off the edge to remove the moulding.

13. REMOVE WINDSHIELD GLASS


HINT:

When the glass is reused, apply adhesive tape or a like to the glass and body, and draw matching marks using a pen.

- (a) Disconnect the connector.
- (b) Apply the protective tape onto the body around the outside circumference of windshield glass.

BODY - WINDSHIELD


- (c) Push piano wire through between the body and glass from the interior.

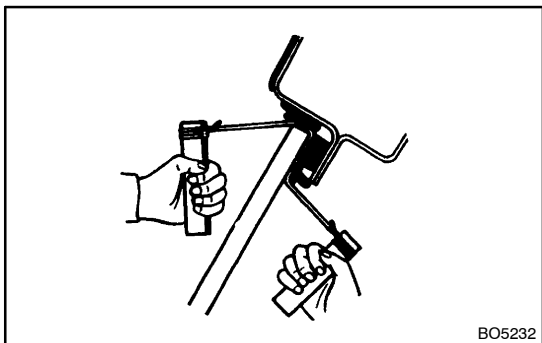


- (d) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

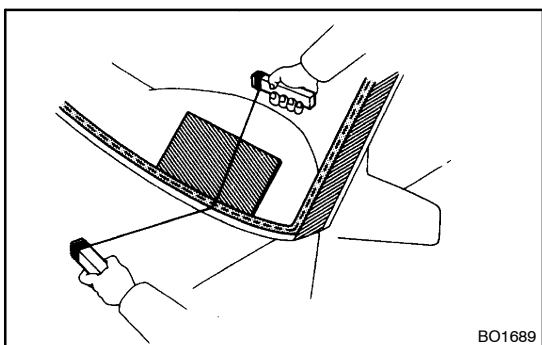**NOTICE:**

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

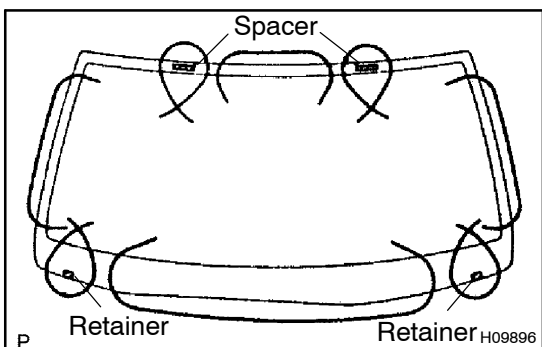

- (e) Cut the adhesive by pulling the piano wire around it as shown in the illustration.

- (f) Remove the windshield glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.