


DTC	P1630/87	Malfunction in Skid Control ECU Communication Circuit
------------	-----------------	--

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
P1630/87	When 2 seconds or more passed after engine starts and if the following condition is met: The time that no VSV communication data is input exists for 5 seconds	<ul style="list-style-type: none"> • Wire harness • Engine ECU • Skid control ECU

WIRING DIAGRAM

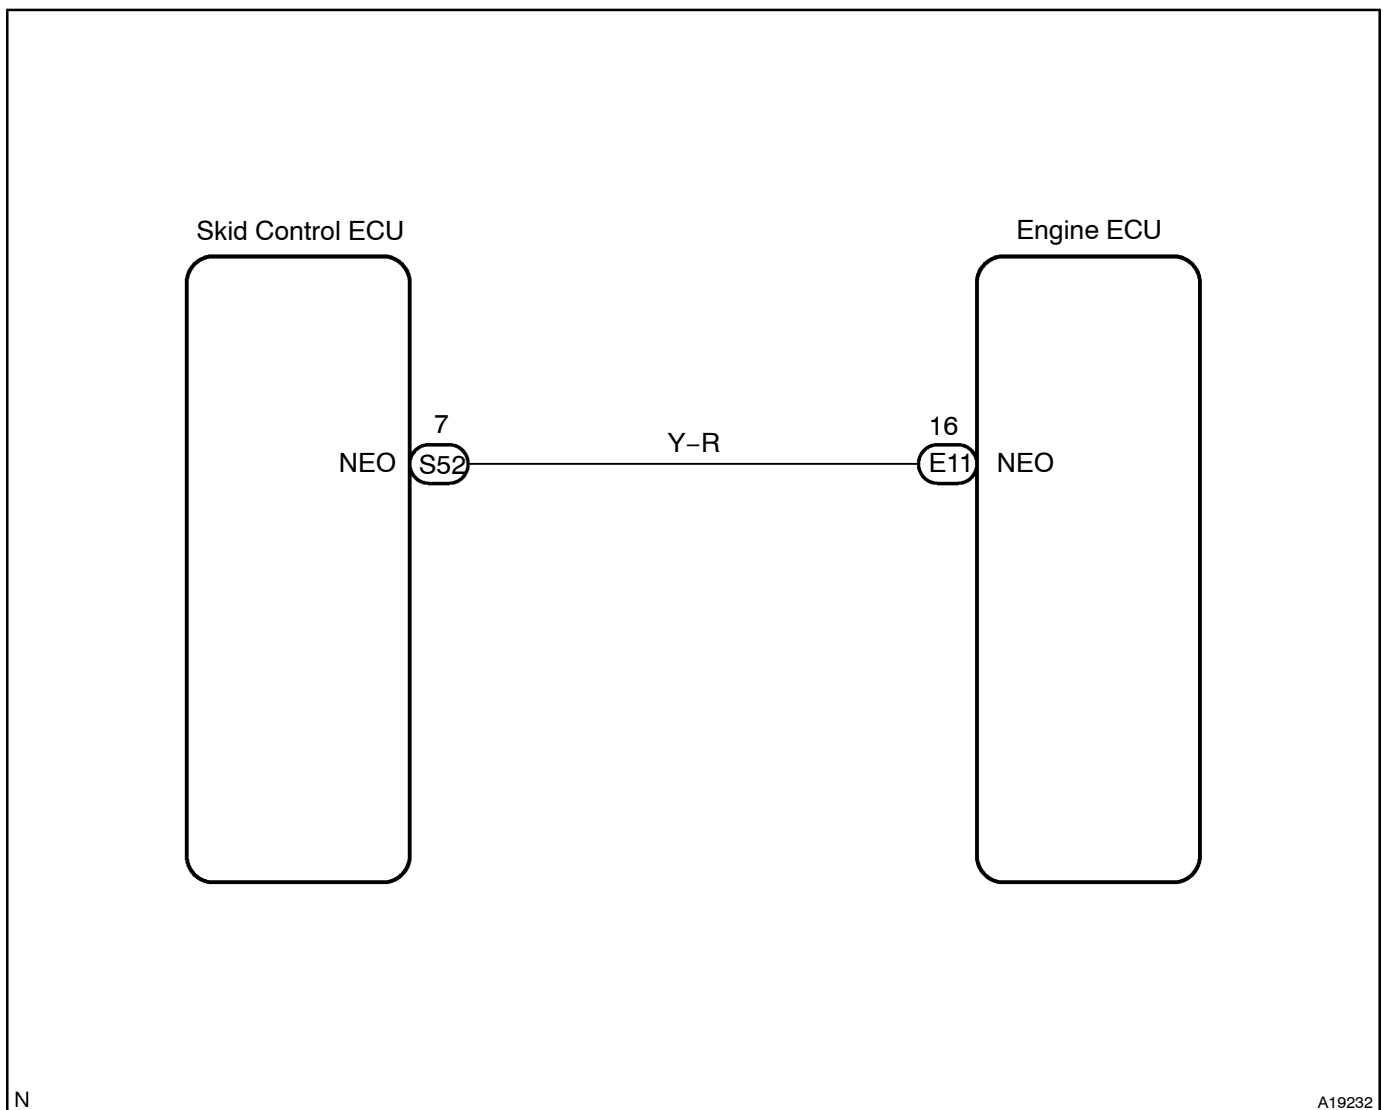

N

A19232

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check for open and short in harness and connector between each terminals BS2+ (BS3+) and BS2- (BS3-) of engine ECU and skid control ECU (See page IN-20). |
|----------|--|

NG**Repair or replace harness or connector.****OK****Check and replace engine ECU and skid control ECU (See page IN-20).**