


REMOVAL

1. REMOVE V-BANK COVER
2. REMOVE AIR CLEANER INLET NO. 1
3. REMOVE EMISSION CONTROL VALVE SET
4. REMOVE INTAKE AIR SURGE TANK w/ INTAKE AIR CONNECTORS LH AND RH
5. DISCONNECT ENGINE WIRE

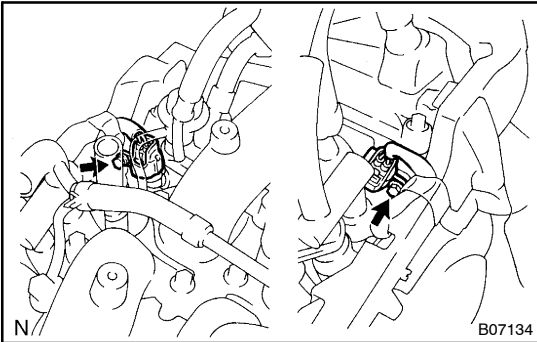

6. REMOVE CAMSHAFT POSITION SENSORS

Remove the 2 bolts and both sensors.

Torque: 8.0 N·m (80 kgf·cm, 66 in·lbf)