
DISVM_01

Wiper motor circuit

CIRCUIT DESCRIPTION

Wiper motor is controlled by the Body ECU. Even CPU is in the failure, its circuit structure enables to operate the wiper with "High" mode.

WIRING DIAGRAM

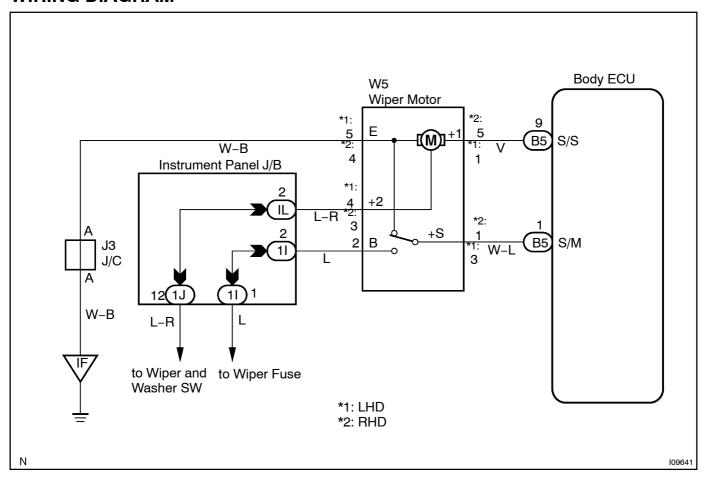

INSPECTION PROCEDURE

HINT:

Incase of cusing the chand-held tester, start the chand-held tester, start from step 2.

1[]

Check wiper motor using hand-held tester.

PREPARATION:

Connect[]he[]hand-held[]ester[]o[]he[]DLC[]3.

CHECK:

 $Check \center{line} hat \center{line} he \center{line} wiper \center{line} motor \center{line} can \center{line} per at e \center{line} hat \center{line}$



Proceed_to_next_circuit_inspection_shown_on problem_symptoms_table.(See_page_DI-488)

NG

2 | Check wiper motor. (See page BE-50)

NG□

Replace the wiper motor.

OK

Check[wireharness[and[connector[between[wiper[motor[and[Body[ECU[[See page]]N-30]].

NG

Repair [pr [replace [wireharness [pr [connector.

OK

Proceed to hext circuit inspection shown on problem symptoms table (See page DI-488).