

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 1000 ± 50 g (35.27 ± 1.76 oz.)

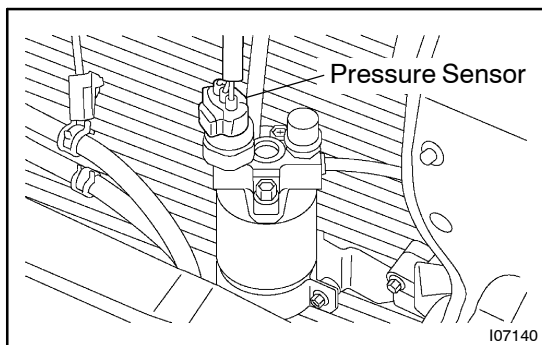

2. REMOVE PRESSURE SENSOR FROM LIQUID TUBE

Disconnect the connector and remove the pressure sensor.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT:

- Lock the sensor mount on the tube with an open end wrench, being careful not to deform the tube, and remove the sensor.
- At the time of installation, please refer to the following item.

Lubricate a new O-ring with the compressor oil and install the sensor.