

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the rear side airbag assembly or body that the rear side airbag assembly is installed to.

Case	Replacing part
If the rear side airbag has been deployed.	Rear side airbag assembly
If the rear side airbag assembly has been found to be faulty in troubleshooting.	Rear side airbag assembly
If the rear side airbag assembly has been found to be faulty during checking items. (See page RS-52)	Rear side airbag assembly
If the body that the rear side airbag assembly is installed to has been found to be faulty during checking items. (See page RS-52)	Body that the rear side airbag assembly is installed to
If the rear side airbag assembly has been dropped.	Rear side airbag assembly

CAUTION:

For removal and installation of the rear side airbag assembly, see page RS-51 and RS-60. Be sure to follow the correct procedure.