


## Telephone transceiver and speaker relay

### WIRING DIAGRAM

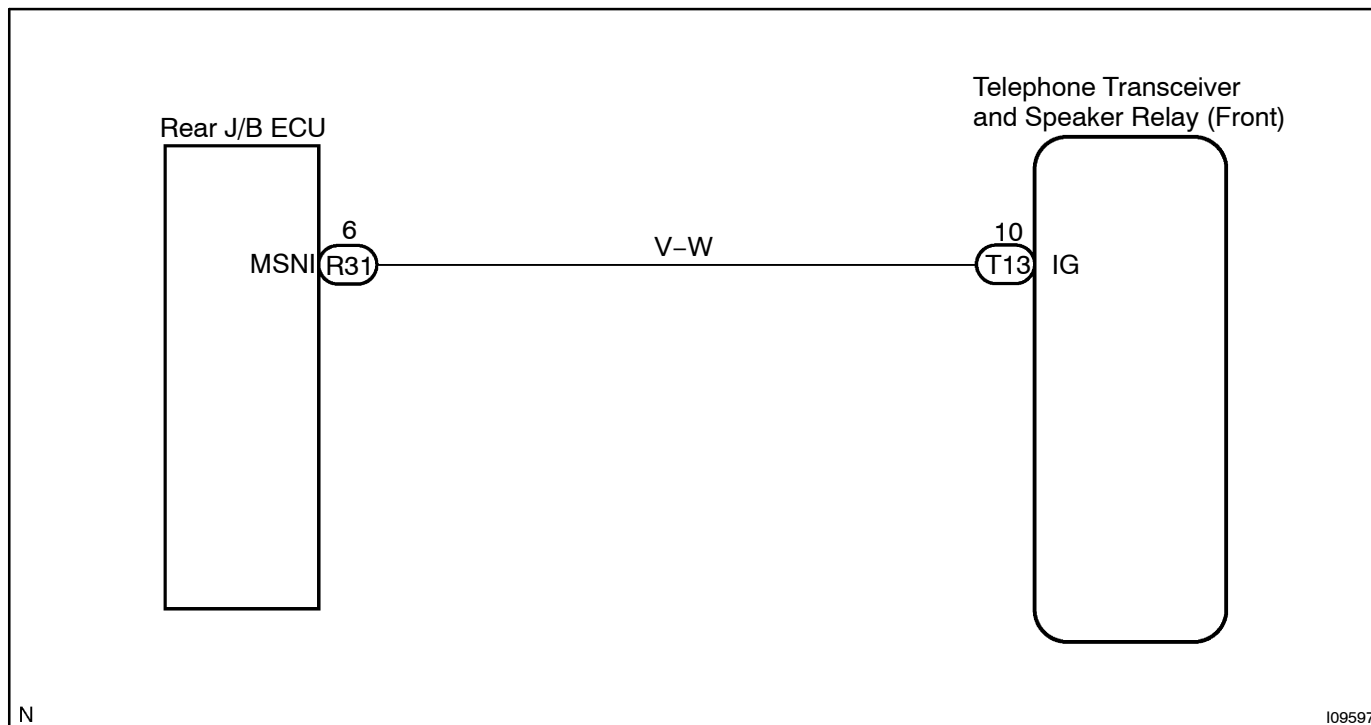

### INSPECTION PROCEDURE

- |   |                          |
|---|--------------------------|
| 1 | <b>Check wireharness</b> |
|---|--------------------------|

#### **PREPARATION:**

Disconnect connectors cellular mobile telephone and of rear J/B ECU.

#### **CHECK:**

Check continuity between terminals BIO of telephone transceiver and speaker relay and MSN1 of rear J/B ECU.

#### **OK:**

Continuity

NG

Repair or replace wireharness

OK

**2 Check the telephone transceiver and speaker relay****CHECK:**

Replace the telephone transceiver and speaker relay and check if it recovers normally.

**OK:**

Must be recovered normally.

**NG**

Proceed to next circuit inspection shown on problem symptoms table (See page DI-665).

**OK**

**Failure of the telephone transceiver and speaker relay.**