


# REAR LIGHT CONTROL SYSTEM

## HOW TO PROCEED WITH TROUBLESHOOTING

DISV6-01

### HINT:

This ECU is connected to the multiplex communication system. Therefore, be sure to check that there is no trouble in the multiplex communication system before performing the troubleshooting.

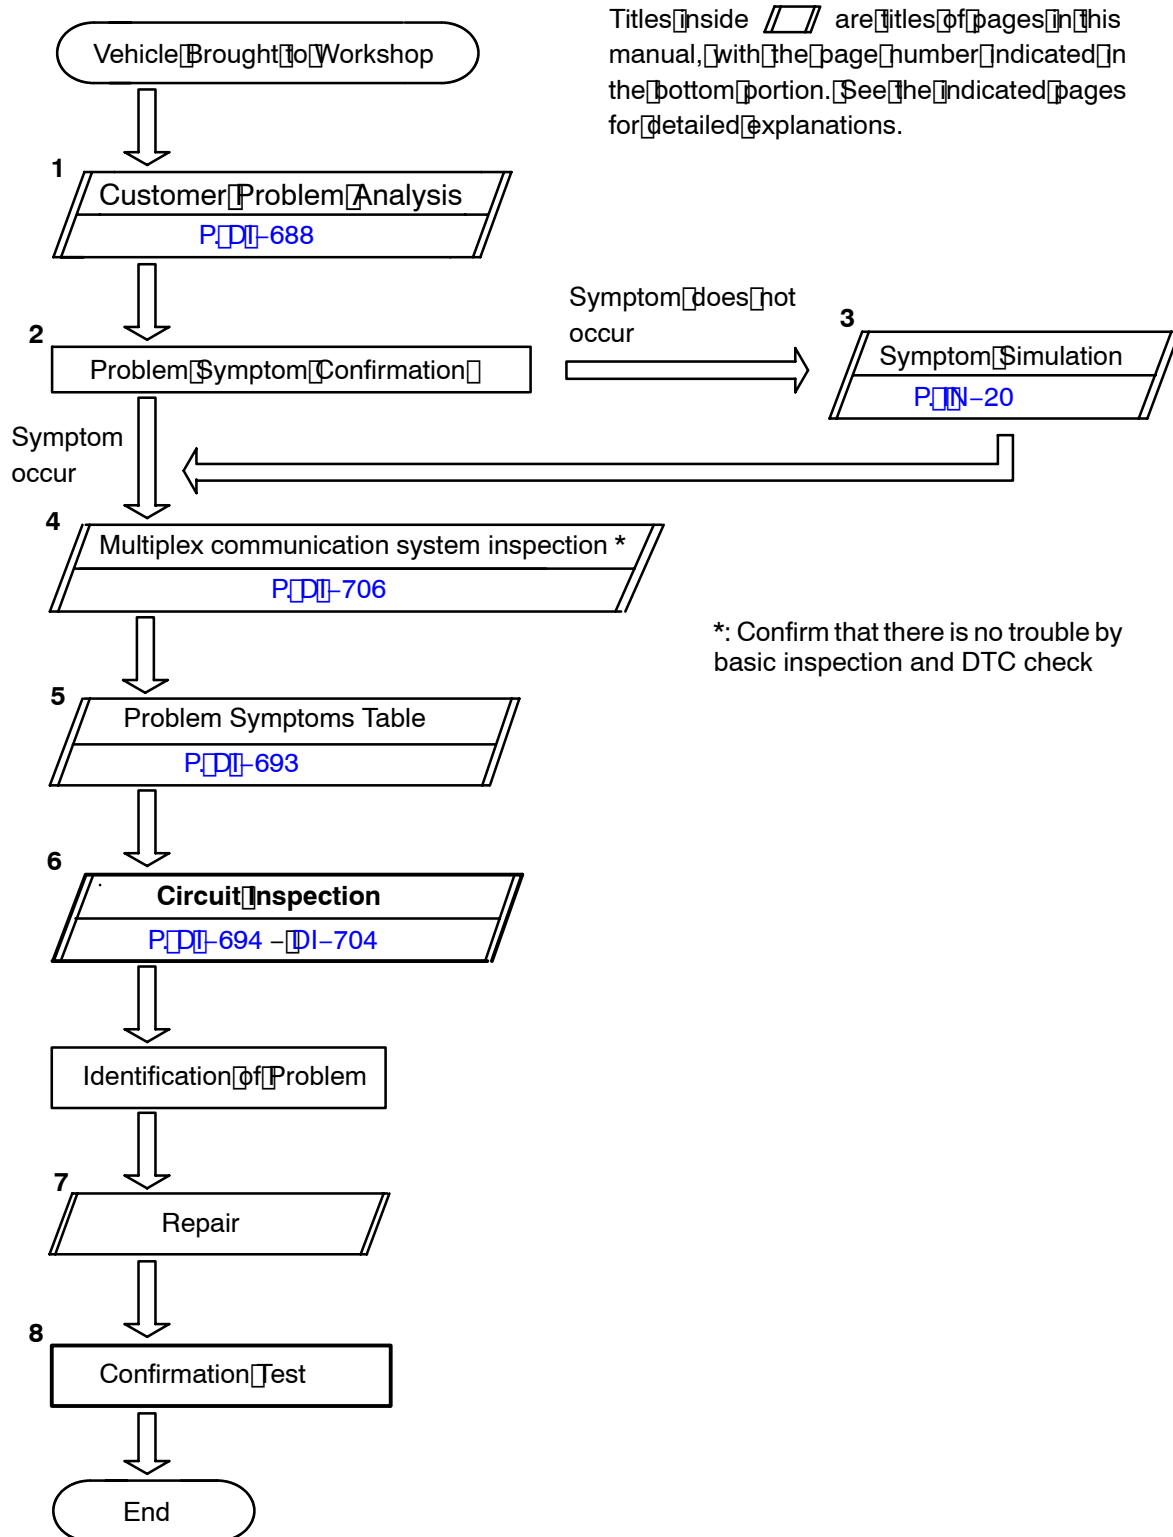

Step 6, 8 : Diagnostic steps permitting the use of the hand-held tester.