

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Companion flange lock nut		123	1,250	90
Extension housing x Transmission case		34	345	25
Transmission mounting bracket x Body		25	250	18
Rear support member x Body		25	260	19
Rear support member x Transmission		13	130	9
Vehicle speed sensor x Transmission		5.4	55	48 in.·lbf
O/D direct clutch speed sensor x Transmission		5.4	55	48 in.·lbf
Neutral start switch x Transmission	Bolt	13	130	9
	Nut	3.9	40	35 in.·lbf
Control shaft lever x Neutral start switch		16	160	12
Valve body x Transmission		10	100	7
ATF temp. sensor clamp x Transmission		6.6	68	58 in.·lbf
Solenoid wire clamp x Transmission		10	100	7
Oil strainer x Valve body		10	100	7
Oil pan x Transmission		7.3	75	65 in.·lbf
Drain plug x Oil pan		20	205	15
Parking lock pawl bracket x Transmission		7.4	75	65 in.·lbf
Oil cooler pipe x Body		5.6	57	50 in.·lbf
Oil cooler x Body		5.6	57	50 in.·lbf
Control shaft sub-assembly x Shift lock plate		13	130	9
Shift lever guide housing x Shift lever plate		4.9	50	43 in.·lbf
Floor shift assembly x Body		8.3	85	74 in.·lbf
Floor shift assembly x Shift control rod		13	130	9
Transmission x Engine		72	730	52
Starter x Transmission		37	380	27
Oil cooler pipe union x Transmission		44	450	32
Torque converter x Drive plate		54	550	40
Hole plug x Transmission		18	185	13
Front floor under reinforcement x Body		13	132	10
Front floor insulator No. 1 x Body		5.5	56	49 in.·lbf
Rear center floor under reinforcement x Body		13	132	10
Exhaust pipe support bracket x Transmission		44	450	32
Exhaust pipe x Catalytic converter supporting bracket		43	440	32
ATF filler pipe x Engine		11.5	117	9
Drive plate x Engine		83	850	61