

REMOVAL

1. REMOVE FRONT SIDE PANEL MOULDING

- (a) Remove the 2 screws.
- (b) Apply the protective tape to the upper moulding coated area.
- (c) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).


NOTICE:

Do not heat the moulding excessively.

- (d) Using a moulding remover, disengage the clips.
- (e) Remove the front side panel moulding while separating the attached part with the adhesive tape.

NOTICE:

Be careful of the heat of the warmed moulding.

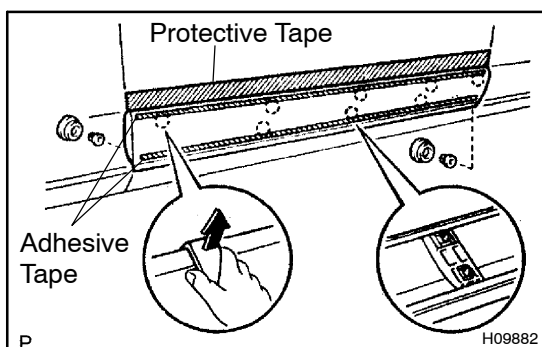

2. REMOVE FRONT DOOR OUTSIDE MOULDING LOWER

- (a) Remove the 2 hole plugs and 2 nuts.
- (b) Apply the protective tape to the upper moulding coated area.
- (c) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).


NOTICE:

Do not heat the moulding excessively.

- (d) Using a moulding remover, disengage the clips.
- (e) Remove the front door outside moulding lower while separating the attached part with the adhesive tape.

NOTICE:

Be careful of the heat of the warmed moulding.

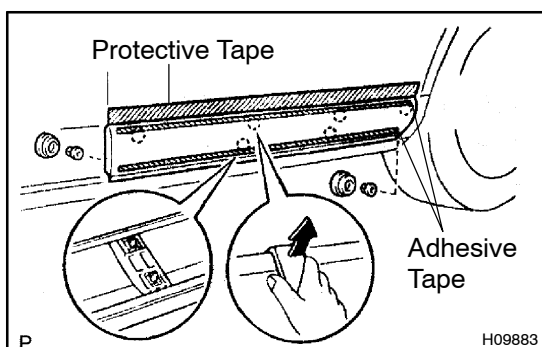

3. REMOVE REAR DOOR OUTSIDE MOULDING LOWER

- (a) Remove the 2 hole plugs and 2 nuts.
- (b) Apply the protective tape to the upper moulding coated area.
- (c) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:


Do not heat the moulding excessively.

- (d) Using a moulding remover, disengage the clips.

- (e) Remove the rear door outside moulding lower while separating the attached part with the adhesive tape.

NOTICE:

Be careful of the heat of the warmed moulding.

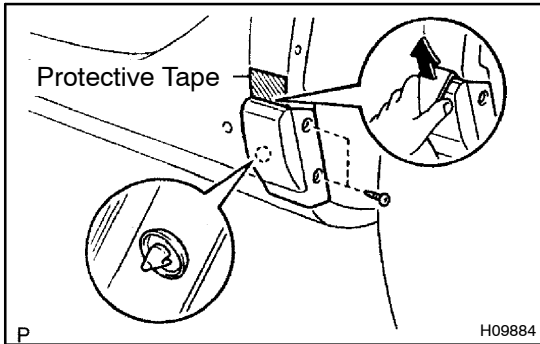**4. REMOVE QUARTER OUTSIDE MOULDING**

- (a) Remove the 2 screws.
- (b) Apply the protective tape to the upper moulding coated area.
- (c) Using a moulding remover, remove the quarter outside moulding.