

M PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 1	Brake Fluid Level Warning SW	90980-11207
A 2	A/C Magnetic Clutch and Lock Sensor	90980-11016	B 2	Blower Controller	90980-11579
A 3	A/C Pressure Sensor	90980-10845	B 3	Blower Controller	90980-11667
A 4	ABS and Traction Actuator	90980-11698	B 4	Blower Motor	90980-10385
A 5	ABS and Traction Actuator	90980-11413	B 5	Body ECU	90980-11469
A 6	ABS Speed Sensor and Pad Wear Indicator Front RH	90980-11291	B 6	Body ECU	90980-11502
A 7	ABS Speed Sensor Front LH	90980-11002	B 7	Body ECU	90980-11475
A 8	Air Flow Meter (Left Bank Control)	90980-11317	B 8	Body ECU	90980-11652
A 9	Air Flow Meter (Right Bank Control)		B 9	Back-Up Light LH	90980-11060
A10	Alternator	90980-09218	B10	Back-Up Light RH	
A11	Alternator	90980-11349	B11	Buckle SW (Driver Side)	90980-10860
A12	A/C Control Assembly	90980-11652	C 1	Camshaft Position Sensor (Left Bank Control)	90980-10947
A13	A/C Control Assembly	90980-11502	C 2	Camshaft Position Sensor (Right Bank Control)	
A14	A/C Control Assembly	90980-11475	C 3	Check Connector	90980-11323
A15	A/C Control Assembly	90980-11469	C 4	Coolant Level SW	90980-10947
A16	A/C Evaporator Temp. Sensor	90980-10825	C 5	Cornering Light LH	90980-11019
A17	A/C Room Temp. Sensor		C 6	Cornering Light RH	
A18	A/C Solar Sensor	90980-11369	C 7	Crankshaft Position Sensor	90980-11292
A19	ABS and Traction ECU	90980-11424	C 8	CD Automatic Changer	90980-10803
A20	ABS and Traction ECU	90980-11391	C 9	Clock (Front)	90980-11013
A21	ABS and Traction ECU	90980-11390	C10	Coin Box Light	90980-11212
A22	Accel Position Sensor	90980-11001	C11	Combination Meter	90980-10921
A23	Accelerator Pedal SW	90980-10906	C12	Combination SW (LHD, U.K.)	90980-11595
A24	Air Inlet Control Servo Motor	90980-11319	C12	Combination SW (RHD Except U.K.)	90980-11671
A25	Air Mix Control Servo Motor (Driver Side)	90980-11165	C13	Combination SW	90980-11614
A26	Air Mix Control Servo Motor (Front Passenger Side)		C14	Combination SW	90980-11616
A27	Air Vent Mode Control Servo Motor (Driver Side)		C15	Combination SW	90980-11594
A28	Air Vent Mode Control Servo Motor (Front Passenger Side)		C16	Cool Air Bypass Servo Motor (Driver Side)	-
A29	Airbag Sensor Assembly	90980-11873	C17	Cool Air Bypass Servo Motor (Front Passenger Side)	
A30	Airbag Sensor Assembly	90980-11872	C18	Cornering Light Relay	90980-11640
A31	Airbag Sensor Assembly	90980-11871	C19	Curtain SW	90980-10789
A32	Airbag Squib (Front Passenger's Airbag Assembly)	90980-10850	C20	Cigarette Lighter Front LH	90980-11606
A33	Airbag Squib (Steering Wheel Pad)		C21	Cigarette Lighter Front RH	
A34	Automatic Light Control Sensor	90980-11471	C22	Cigarette Lighter Rear LH	
A35	ABS Speed Sensor and Pad Wear Indicator Rear RH	90980-10794	C23	Cigarette Lighter Rear RH	
A36	ABS Speed Sensor Rear LH	90980-11300	C24	Clock (Rear)	90980-10601
A37	Acceleration Sensor	90980-10845	C25	Curtain Motor	90980-10825
A38	Auto Antenna Motor and Relay	90980-10799	D 1	DLC3	90980-11665
A39	Automatic Curtain Control Relay	90980-10801	D 2	Duct Sensor (Driver Side)	90980-10825
			D 3	Duct Sensor (Front Passenger Side)	

Note : Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Nota : Toutes les références du connecteur ne sont pas définies pour la fourniture. Pour passer une commande d'un connecteur ou d'une borne avec fil, prière de vérifier préalablement si cette pièce est bien disponible en se reportant à "Parts Catalog News" (publié par le Département de la Gestion de l'Ingénierie).

Code	Part Name	Part Number	Code	Part Name	Part Number
D 4	Door Closer Relay Rear LH	90980-10996	F14	Fusible Link Block	82620-40010
D 5	Door Closer Relay Rear RH		F15	Front Cellular Phone (Hand Set)	90980-10360
D 6	Door Courtesy Light Front LH	90980-11148	F16	Front Cellular Phone (Hand Set)	90980-10998
D 7	Door Courtesy Light Front RH		F17	Fuel Lid Opener SW	90980-10825
D 8	Door Courtesy Light Rear LH		F18	Fuse Block	82610-20080
D 9	Door Courtesy Light Rear RH	90980-11148	F19	Front Door LH ECU (LHD)	-
D10	Door Key Lock and Unlock SW, Door Unlock Detection SW, Door Courtesy SW and Door Lock Motor Front LH	90980-11535		Front Door LH ECU (RHD)	90980-11877
D11	Door Key Lock and Unlock SW, Door Unlock Detection SW, Door Courtesy SW and Door Lock Motor Front RH		F20	Front Door RH ECU (LHD)	-
D12	Door Lock Control SW LH	90980-11319		Front Door RH ECU (RHD)	90980-11877
D13	Door Lock Control SW RH		F21	Front Door Speaker LH	90980-10935
D14	Door Lock Motor and Door Unlock Detection SW Rear LH	90980-10831	F22	Front Door Speaker RH	
D15	Door Lock Motor and Door Unlock Detection SW Rear RH		F23	Front Seat Heater Control Relay	90980-10848
E 1	ECT Solenoid		90980-11658	F24	Fuel Lid Opener Solenoid
E 2	EFI Water Temp. Sensor (Left Bank Control)	90980-10737	F25	Fuel Pump	90980-10980
E 3	EFI Water Temp. Sensor (Right Bank Control)		F26	Fuel Sender	90980-10908
E 4	ECT Pattern Select SW	90980-10797	G 1	Glove Box Light No.1	90980-11148
E 5	Engine and ECT ECU (Left Bank Control)	90980-11638	G 2	Glove Box Light No.2	
E 6	Engine and ECT ECU (Left Bank Control)	90980-11637	G 3	Glove Box Light SW	90980-11098
E 7	Engine and ECT ECU (Left Bank Control)	90980-11586	H 1	Headlight LH (High and Low Beam)	90980-11314
E 8	Engine and ECT ECU (Left Bank Control)	90980-11476	H 2	Headlight LH (High Beam)	90980-11095
E 9	Engine and ECT ECU (Left Bank Control)	90980-11421	H 3	Headlight RH (High and Low Beam)	90980-11314
E10	Engine and ECT ECU (Right Bank Control)	90980-11638	H 4	Headlight RH (High Beam)	90980-11095
E11	Engine and ECT ECU (Right Bank Control)	90980-11637	H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-11028
E12	Engine and ECT ECU (Right Bank Control)	90980-11476	H 6	Heated Oxygen Sensor (Bank 2 Sensor 1)	
E13	Engine and ECT ECU (Right Bank Control)	90980-11421	H 7	Height Control Compressor	90980-10990
F 1	Fender Marker Light LH	90980-11074	H 8	Height Control Exhaust Valve	90980-11156
F 2	Fender Marker Light RH		H 9	Height Control Relay	90980-10940
F 3	Front Clearance Light LH	90980-11156	H10	Height Control Sensor and Acceleration Sensor Front LH	90980-11291
F 4	Front Clearance Light RH		H11	Height Control Sensor and Acceleration Sensor Front RH	
F 5	Front Fog Light LH		H12	Height Control Solenoid Valve (Front)	90980-11016
F 6	Front Fog Light RH	90980-11096	H13	Horn LH	90980-10619
F 7	Front Side Turn Signal Light LH		H14	Horn RH	
F 8	Front Side Turn Signal Light RH	90980-11162	H15	Hazard SW	90980-10801
F 9	Front Turn Signal Light LH	90980-11019	H16	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
F10	Front Turn Signal Light RH		H17	Heated Oxygen Sensor (Bank 2 Sensor 2)	
F11	Fuel Pump Change Relay	90980-10939	H18	Height Control SW	90980-10797
F12	Fuel Pump Resistor	90980-11003	H19	Height Control Sensor Rear LH	90980-11298
F13	Fusible Link Block	82620-40020	H20	Height Control Sensor Rear RH	
			H21	Height Control Solenoid Valve (Rear)	90980-11016
			H22	High Mounted Stop Light	90980-10795

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro. Al pedir un conector o terminal con cable, asegúrese, de antemano, de que esté suministrado refiriéndose a "Parts Catalog News" (publicado por el Departamento Administrativo de Ingeniería de las Partes).

Anmerkung : Nicht alle der obenerwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert. Im Falle der Bestellung von Stecker oder Anschlußklemme mit Draht bestätigen Sie bitte unter Verwendung der "Teile-Prospekt-Nachrichten" (herausgegeben durch die Teile-Engineering-Verwaltungsabteilung) im voraus, ob es entsprechende Lieferung gibt.

M PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I 1	Igniter (Left Bank Control)	90980-11653	J17	Junction Connector	90980-11542
I 2	Igniter (Right Bank Control)		J18	Junction Connector	
I 3	Ignition Coil No.1	90980-11246	J19	Junction Connector	
I 4	Ignition Coil No.2		J20	Junction Connector	
I 5	Ignition Coil No.3		J21	Junction Connector	90980-11398
I 6	Ignition Coil No.4		J22	Junction Connector	90980-11542
I 7	Ignition Coil No.5		J23	Junction Connector	90980-11661
I 8	Ignition Coil No.6		J24	Junction Connector	
I 9	Injector No.1	90980-11153	J25	Junction Connector	
I10	Injector No.2	90980-11153	J26	Junction Connector	90980-11542
I11	Injector No.3		J27	Junction Connector	
I12	Injector No.4		J28	Junction Connector	90980-11502
I13	Injector No.5		J29	Junction Connector	90980-11542
I14	Injector No.6		J30	Junction Connector	
I15	Injector No.7		J31	Junction Connector	
I16	Injector No.8		J32	Junction Connector	
I17	Injector No.9		J33	Junction Connector	
I18	Injector No.10		J34	Junction Connector	
I19	Injector No.11		J35	Junction Connector	90980-11542
I20	Injector No.12		J36	Junction Connector	90980-11502
I21	Ignition Key Cylinder Light		90980-10906	J37	Junction Connector
I22	Ignition SW	90980-10873	J38	Junction Connector (LHD)	90980-11398
I23	Inner Mirror	90980-11187		Junction Connector (RHD)	90980-11542
J 1	Junction Connector	90980-11542	J39	Junction Connector (LHD)	90980-11398
J 2	Junction Connector			Junction Connector (RHD)	90980-11542
J 3	Junction Connector		K 1	Keyless Buzzer	90980-11002
J 4	Junction Connector		K 2	Knock Sensor 1	90980-11166
J 5	Junction Connector	90980-11502	K 3	Knock Sensor 2	
J 6	Junction Connector	90980-11542	K 4	Knock Sensor 3	
J 7	Junction Connector	90980-11661	K 5	Knock Sensor 4	
J 8	Junction Connector		K 6	Keyless Entry Cancel SW	90980-10825
J 9	Junction Connector		K 7	Kick Down SW	90980-11156
J10	Junction Connector		L 1	Luggage Compartment Door Opener SW	90980-10860
J11	Junction Connector		L 2	License Plate Light LH	90980-11159
J12	Junction Connector		L 3	License Plate Light RH	
J13	Junction Connector	90980-11542	L 4	Luggage Compartment Door Closer Limit SW	90980-11490
J14	Junction Connector	90980-11502	L 5	Luggage Compartment Door Closer Motor	90980-10860
J15	Junction Connector	90980-11542	L 6	Luggage Compartment Door Closer Relay	90980-10801
J16	Junction Connector	90980-11502			

Note : Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Nota : Toutes les références du connecteur ne sont pas définies pour la fourniture. Pour passer une commande d'un connecteur ou d'une borne avec fil, prière de vérifier préalablement si cette pièce est bien disponible en se reportant à "Parts Catalog News" (publié par le Département de la Gestion de l'Ingénierie).

Code	Part Name	Part Number	Code	Part Name	Part Number
L 7	Luggage Compartment Door Opener Motor and Open Detection SW	90980-10825	P21	Power Window Control SW Rear RH	90980-11165
L 8	Luggage Compartment Light	90980-11148	P22	Power Window Control SW Rear RH Illumination	90980-11436
M 1	Mirror Heater LH	90980-11002	P23	Power Window Master SW	90980-11058
M 2	Mirror Heater RH		P24	Power Window Master SW Illumination	90980-11436
M 3	Microphone Amplifier	90980-10800	P25	Pretensioner LH	90980-11862
N 1	Neutral Start SW	90980-11332	P26	Pretensioner RH	
N 2	Noise Filter (Defogger No.1)	90980-11184	P27	Power Seat Control Relay	90980-10807
N 3	Noise Filter (Defogger No.2)		P28	Power Seat Control SW (Driver's Seat)	90980-10885
N 4	Noise Filter (Ignition Left Bank Control No.1)	90980-10843	P29	Power Seat Control SW (Front Passenger's Seat)	
N 5	Noise Filter (Ignition Left Bank Control No.2)		P30	Power Seat Limit SW (Front Passenger's Seat)	90980-10825
N 6	Noise Filter (Ignition Right Bank Control No.1)		P31	Power Seat Motor (Driver's Seat Front Vertical Control)	
N 7	Noise Filter (Ignition Right Bank Control No.2)		P32	Power Seat Motor (Driver's Seat Lumbar Support Control)	
N 8	Noise Filter (Rear Window Defogger)		90980-11259	P33	
O 1	O/D Direct Clutch Speed Sensor	90980-11156	P34	Power Seat Motor (Driver's Seat Reclining Control)	
O 2	Oil Pressure SW	90980-11363	P35	Power Seat Motor (Driver's Seat Slide Control)	
O 3	O/D Main SW	90980-10789	P36	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	
P 1	Power Steering Oil Pressure SW	90980-11428	P37	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)	
P 2	PPS Solenoid	90980-11162	P38	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
P 3	Parking Brake SW	90980-11146	P39	Power Seat Motor (Front Passenger's Seat Reclining Control)	
P 4	Power Seat Control SW (Front Console Box Front Passenger's Seat Control)	90980-11533	P40	Power Seat Motor (Front Passenger's Seat Slide Control)	
P 5	PPS ECU	90980-10797	P41	Power Seat Relay (Reclining Control)	90980-10799
P 6	Personal Light	90980-10795	P42	Power Seat Relay (Slide Control)	
P 7	Power Outlet	90980-10859	P43	Power Seat Limit SW Rear LH	90980-11533
P 8	Power Seat Control SW (Rear Seat Armrest Front Passenger's Seat Control)	90980-11532	P44	Power Seat Limit SW Rear RH	
P 9	Power Seat Control SW Rear LH	90980-10818	P45	Power Seat Motor (Rear Seat LH Head Rest Top and Bottom Control)	90980-10825
P10	Power Seat Control SW Rear RH		P46	Power Seat Motor (Rear Seat LH Head Rest Turning Control)	90980-10795
P11	Power Seat Rear LH ECU	90980-11502	P47	Power Seat Motor (Rear Seat LH Lumbar Support Control)	90980-10825
P12	Power Seat Rear LH ECU	90980-11527	P48	Power Seat Motor (Rear Seat RH Head Rest Top and Bottom Control)	
P13	Power Seat Rear RH ECU	90980-11502	P49	Power Seat Motor (Rear Seat RH Head Rest Turning Control)	90980-10795
P14	Power Seat Rear RH ECU	90980-11527			
P15	Power Window Control SW Front LH	90980-11165			
P16	Power Window Control SW Front LH Illumination	90980-11436			
P17	Power Window Control SW Front RH	90980-11165			
P18	Power Window Control SW Front RH Illumination	90980-11436			
P19	Power Window Control SW Rear LH	90980-11165			
P20	Power Window Control SW Rear LH Illumination	90980-11436			

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro. Al pedir un conector o terminal con cable, asegúrese, de antemano, de que esté suministrado refiriéndose a "Parts Catalog News" (publicado por el Departamento Administrativo de Ingeniería de las Partes).

Anmerkung : Nicht alle der obenerwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert. Im Falle der Bestellung von Stecker oder Anschlußklemme mit Draht bestätigen Sie bitte unter Verwendung der "Teile-Prospekt-Nachrichten" (herausgegeben durch die Teile-Engineering-Verwaltungsabteilung) im voraus, ob es entsprechende Lieferung gibt.

M PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
P50	Power Seat Motor (Rear Seat RH Lumbar Support Control)	90980-10825	R36	Rear Seat Heater Control Relay	90980-10848
P51	Power Seat Motor and Position Sensor (Rear Seat LH Slide Control)	90980-10797	R37	Rear Turn Signal Light LH	90980-10825
P52	Power Seat Motor and Position Sensor (Rear Seat LH Vertical Control)		R38	Rear Turn Signal Light RH	
P53	Power Seat Motor and Position Sensor (Rear Seat RH Slide Control)		R39	Remote Control Mirror and Mirror Heater LH	90980-11532
P54	Power Seat Motor and Position Sensor (Rear Seat RH Vertical Control)		R40	Remote Control Mirror and Mirror Heater RH	
R 1	Remote Control Mirror LH	90980-11295	S 1	Solenoid Valve (Cooling Fan)	90980-10887
R 2	Remote Control Mirror RH		S 2	Speed Sensor (ECT)	90980-11156
R 3	Radio and Player	90980-10797	S 3	Starter	90980-11400
R 4	Radio and Player	90980-10803	S 4	Starter	90980-09506
R 5	Rear Fog Light SW	90980-11090	S 5	Suspension Control Actuator Front LH	90980-10789
R 6	Remote Control Mirror SW	90980-11657	S 6	Suspension Control Actuator Front RH	
R 7	Rheostat	90980-11450	S 7	Security Indicator Light	90980-11490
R 8	Rear A/C Amplifier	90980-10848	S 8	Shift Lock Control ECU	90980-11556
R 9	Rear A/C and Audio Control Panel	90980-11503	S 9	Short Connector (Combination Meter)	90980-11368
R10	Rear Blower Motor	90980-10825	S10	Short Connector (Combination Meter)	90980-11369
R11	Rear Blower Resistor	90980-10216	S11	Short Connector (Horn and Dimmer)	
R12	Rear Cellular Phone (Hand Set)	90980-10998	S12	Short Connector (Horn and Dimmer)	90980-11368
R13	Rear Cellular Phone (Hand Set)	90980-11001	S13	Step Light Front LH	90981-11041
R14	Rear Cellular Phone (Hand Set)	90980-11436	S14	Step Light Front RH	
R15	Rear Cellular Phone (Hand Set)	90980-11367	S15	Stereo Component Amplifier	90980-10819
R16	Rear Cellular Phone (Hand Set)	90980-10360	S16	Stereo Component Amplifier	90980-10807
R17	Rear Cellular Phone (Hand Set)	90980-10321	S17	Stereo Component Amplifier	90980-10797
R18	Rear Combination Light LH	90980-10908	S18	Stereo Component Amplifier	90980-10801
R19	Rear Combination Light LH	90980-11399	S19	Stop Light SW	90980-11118
R20	Rear Combination Light LH	90980-10907	S20	Suspension Control ECU	90980-11390
R21	Rear Combination Light RH	90980-10908	S21	Suspension Control ECU	90980-11391
R22	Rear Combination Light RH	90980-11399	S22	Suspension Control ECU	90980-11424
R23	Rear Combination Light RH	90980-10907	S23	Seat Heater SW (Driver's Door Rear Seat Control)	90980-11319
R24	Rear Damper Servo Motor	90980-11321	S24	Seat Heater SW Front LH	90980-11321
R25	Rear Door LH ECU	90980-11877	S25	Seat Heater SW Front RH	
R26	Rear Door RH ECU	90980-11877	S26	Seat Heater SW Rear LH	
R27	Rear Door Speaker LH	90980-10935	S27	Seat Heater SW Rear RH	90980-11319
R28	Rear Door Speaker RH		S28	Shoulder Belt Adjust SW LH	
R29	Rear Interior Light LH	90980-11296	S29	Shoulder Belt Adjust SW RH	90980-10906
R30	Rear Interior Light RH	90980-10908	S30	Shoulder Belt Anchor Motor LH	
R31	Rear J/B ECU	90980-11502	S31	Shoulder Belt Anchor Motor RH	
R32	Rear J/B ECU	90980-11475	S32	Shoulder Belt Anchor Relay LH	90980-10799
R33	Rear Light ECU LH	90980-11469	S33	Shoulder Belt Anchor Relay RH	
R34	Rear Light ECU RH		S34	Side Airbag Sensor LH	90980-11857
R35	Rear Magnetic Valve	90980-10039	S35	Side Airbag Sensor RH	
			S36	Side Airbag Squib Rear LH	90980-11864
			S37	Side Airbag Squib Rear RH	

Note : Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Nota : Toutes les références du connecteur ne sont pas définies pour la fourniture. Pour passer une commande d'un connecteur ou d'une borne avec fil, prière de vérifier préalablement si cette pièce est bien disponible en se reportant à "Parts Catalog News" (publié par le Département de la Gestion de l'Ingénierie).

Code	Part Name	Part Number	Code	Part Name	Part Number
S38	Smoke Sensor	90980-10908	T14	Tweeter Front LH	90980-10795
S39	Suspension Control Actuator Rear LH	90980-10789	T15	Tweeter Front RH	
S40	Suspension Control Actuator Rear RH		T16	Tweeter Rear LH	
S41	Seat Heater (Driver Side)	90980-11399	T17	Tweeter Rear RH	
S42	Seat Heater (Front Passenger Side)		V 1	VSV (ACIS Left Bank Control)	90980-11149
S43	Side Airbag Squib Front LH	90980-11864	V 2	VSV (ACIS Right Bank Control)	
S44	Side Airbag Squib Front RH		V 3	VSV (EVAP Left Bank Control)	90980-11156
S45	Seat Heater Rear LH (Seat Back)	90980-10825	V 4	VSV (EVAP Right Bank Control)	
S46	Seat Heater Rear LH (Seat Cushion)	90980-11532	V 5	VSV (FPU)	90980-11156
S47	Seat Heater Rear RH (Seat Back)	90980-10825	V 6	VVT Solenoid (Left Bank Control)	90980-11002
S48	Seat Heater Rear RH (Seat Cushion)	90980-11532	V 7	VVT Solenoid (Right Bank Control)	90980-11162
S49	Step Light Rear LH	90980-10824	V 8	Vanity Light Front LH	90980-11369
S50	Step Light Rear RH		V 9	Vanity Light Front RH	
T 1	Throttle Control Motor (Left Bank Control)	90980-11144	V10	Vanity Light Rear LH	
T 2	Throttle Control Motor (Right Bank Control)		V11	Vanity Light Rear RH	
T 3	Throttle Control Relay (Left Bank Control)	90980-10940	V12	Vibration SW LH	90980-11319
T 4	Throttle Control Relay (Right Bank Control)		V13	Vibration SW RH	
T 5	Throttle Position Sensor (Left Bank Control)	90980-10711	V14	Voltage Converter Assembly	90980-10905
T 6	Throttle Position Sensor (Right Bank Control)		V15	Vibration Seat ECU LH	90980-10803
T 7	Tilt and Telescopic ECU	90980-11542	V16	Vibration Seat ECU RH	90980-10803
T 8	Tilt and Telescopic ECU	90980-11556	V17	Vibrator LH	90980-10908
T 9	Tilt and Telescopic Motor and Telescopic Position Sensor	90980-10801	V18	Vibrator RH	
T10	Tilt Position Sensor	90980-11053	W 1	Washer Motor	90980-10981
T11	Transponder Key Computer	90980-11475	W 2	Water Temp. Sender	90980-11428
T12	Telephone Transceiver and Speaker Relay (Front)	90980-10803	W 3	Water Temp. Sensor	90980-11235
T13	Telephone Transceiver and Speaker Relay (Front)	90980-10802	W 4	Wiper Angle Control Motor	90980-11194
			W 5	Wiper Motor	90980-11599
			W 6	Water Valve Servo Motor	90980-11471
			W 7	Wireless Door Lock Control Receiver	90980-11165
			W 8	Woofers (Speakers)	90980-10860

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro. Al pedir un conector o terminal con cable, asegúrese, de antemano, de que esté suministrado refiriéndose a "Parts Catalog News" (publicado por el Departamento Administrativo de Ingeniería de las Partes).

Anmerkung : Nicht alle der obenerwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert. Im Falle der Bestellung von Stecker oder Anschlußklemme mit Draht bestätigen Sie bitte unter Verwendung der "Teile-Prospekt-Nachrichten" (herausgegeben durch die Teile-Engineering-Verwaltungsabteilung) im voraus, ob es entsprechende Lieferung gibt.