


DUCT SENSOR INSPECTION

AC24S-01

1. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY
2. REMOVE INSTRUMENT PANEL PAD LOWER

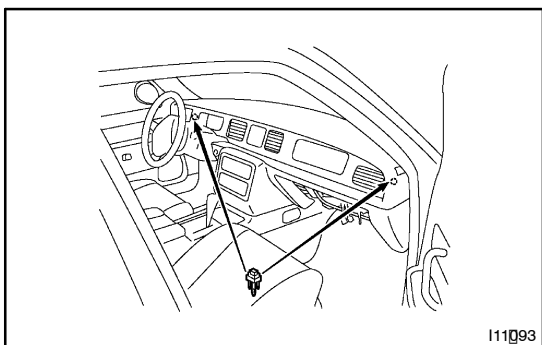

I11093

3. REMOVE SENSOR


- (a) Disconnect the connectors.
- (b) Remove the driver side sensor from the heater to resistor duct No. 1.
- (c) Remove the passenger side sensor from the heater to resistor duct No. 4.

4. INSPECT DUCT SENSOR CIRCUIT (Driver side)

(See page DI-792)

5. INSPECT DUCT SENSOR CIRCUIT (Passenger side)

(See page DI-795)

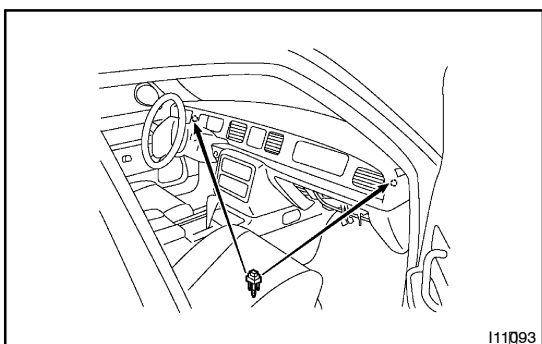

I11093

6. INSTALL SENSORS

- (a) Install the driver side sensor to the heater to resistor duct No. 1.
- (b) Install the passenger side sensor to the heater to resistor duct No. 4.
- (c) Connect the connector.