

REMOVAL

1. Front:

REMOVE FRONT RIGHT WHEEL AND FENDER LINER

2. Rear:

REMOVE LUGGAGE COMPARTMENT FLOOR MAT AND TRIM FRONT COVER
(See page BO-43)

3. Front:

REMOVE HEIGHT CONTROL VALVE

- (a) Disconnect the connector.
- (b) Disconnect the 4 air tubes.
 - (1) Remove the 4 holders.
 - (2) Spread the 4 clips and pull the air tubes out straightly and slowly.

NOTICE:

Do not get scratches or foreign particles.

- (3) Remove the 7 O-rings.
- (4) Remove the 4 clips.
- (c) Remove the 2 nuts and the height control valve.

4. Rear:

REMOVE HEIGHT CONTROL VALVE

- (a) Disconnect the connector.
- (b) Disconnect the 3 air tubes.
 - (1) Remove the 3 holders.
 - (2) Spread the 3 clips and pull the air tubes out straightly and slowly.

NOTICE:

Do not get scratches or foreign particles.

- (3) Remove the 5 O-rings.
- (4) Remove the 3 clips.
- (c) Remove the 2 nuts and the height control valve.

5. Front:

REMOVE 2 SPACERS AND BUSHINGS

6. Rear:

REMOVE BRACKET AND 2 BUSHING