


REMOVAL

NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

1. REMOVE FRONT DOOR SCUFF PLATE
2. REMOVE REAR DOOR SCUFF PLATE
3. REMOVE CENTER PILLAR LOWER GARNISH
4. REMOVE RETRACTOR PART OF FRONT SEAT OUTER BELT (See page BO-151)
 - (a) Disconnect the pretensioner connector.
 - (b) Remove the 2 bolts and retractor.

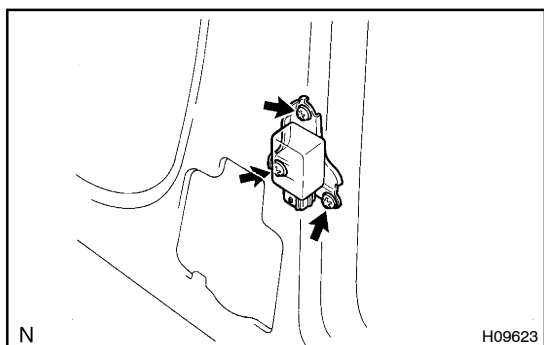

5. REMOVE SIDE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the side airbag sensor assembly connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and side airbag sensor assembly.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)