

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none"> With the ignition switch in ACC or ON position, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed. SRS warning light is always lit up even when ignition switch is in the LOCK position. With the ignition switch in ACC or ON position, the SRS warning light does not light up. 	<ul style="list-style-type: none"> SRS warning light circuit 	DI-371
<ul style="list-style-type: none"> DTC is not displayed. SRS warning light is always lit up at the time of DTC check procedure. DTC is displayed without Tc and E1 terminal connection. 	<ul style="list-style-type: none"> Tc terminal circuit 	DI-376