


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the rear light ECU.

WIRING DIAGRAM

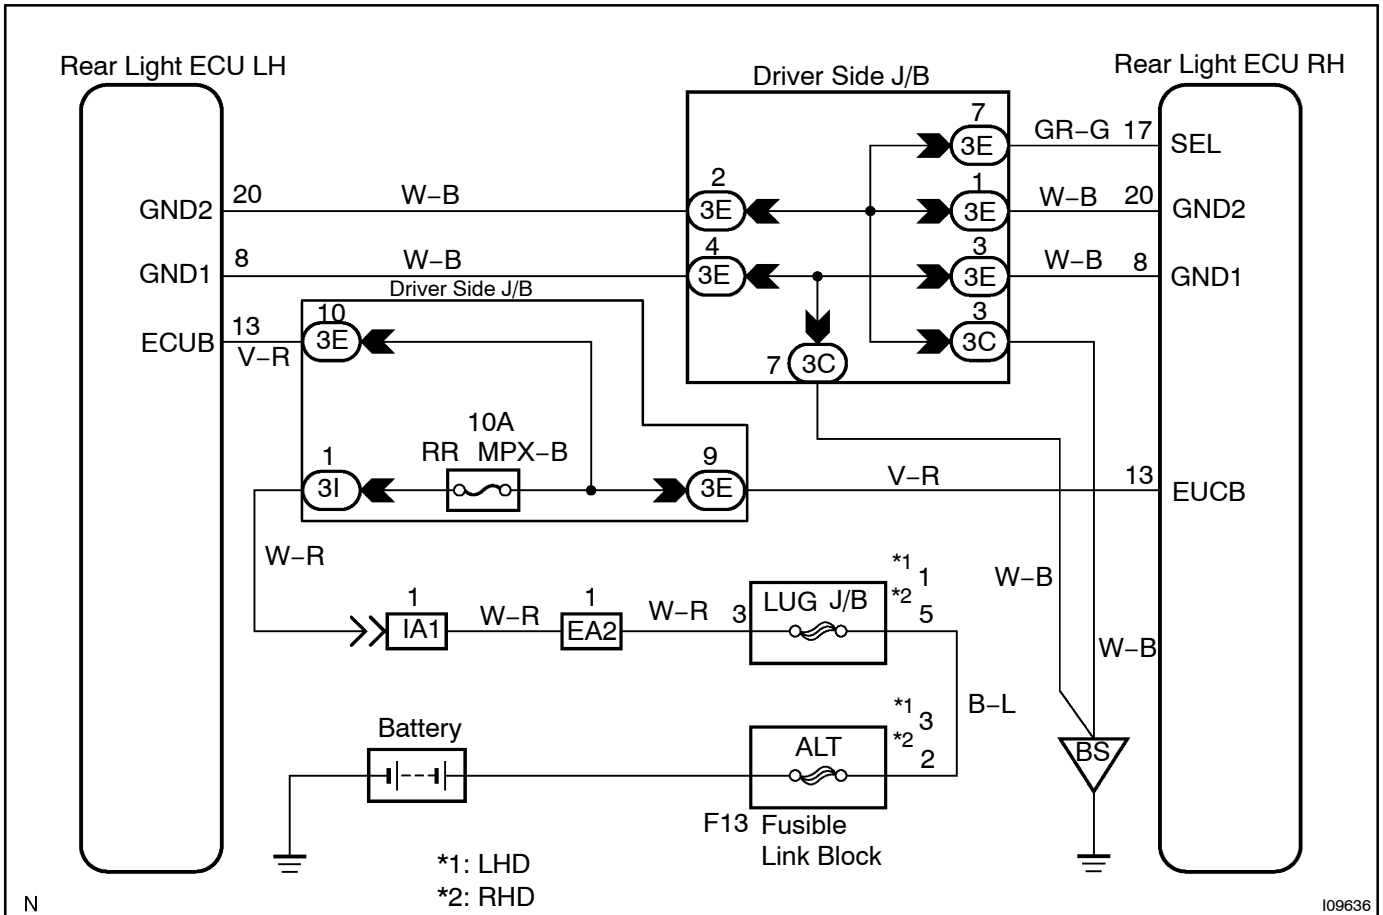

INSPECTION PROCEDURE

1 Check REAR LAMP RH, REAR LAMP LH and RR MPX-B fuse.

CHECK:

Check continuity of REAR LAMP RH, REAR LAMP LH and RR MPX-B fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals LB+, ECUB and GND of rear light ECU connector.

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the rear light ECU connector.

CHECK:

Measure voltage between terminals LB+, ECUB and GND.

OK:

Voltage: 10 - 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-693).

NG

3 Check wireharness and connector between ECU and body ground (See page IN-30).

NG

Repair or replace wireharness or connector

OK

Check and repair wireharness and connector between ECU and battery (See page IN-30).