



REMOVAL

1. REMOVE STEERING KNUCKLE WITH AXLE HUB
(See page SA-13)
2. REMOVE FRONT PNEUMATIC CYLINDER
(See page SA-22)

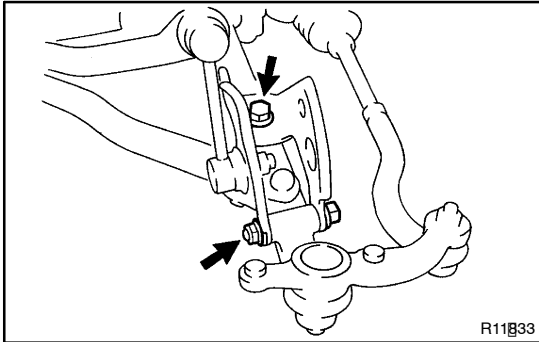

3. REMOVE SHOCK ABSORBER LOWER BRACKET
Remove the nut, 2 bolts and shock absorber lower bracket.

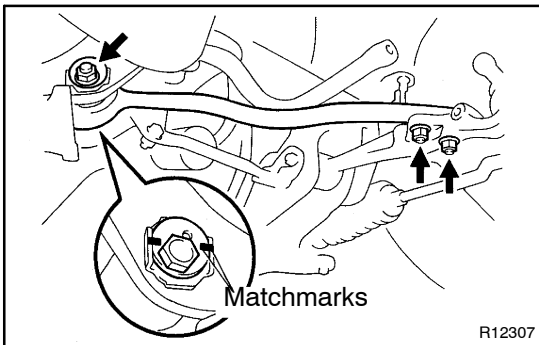

4. REMOVE STRUT BAR
 - (a) Place matchmarks on the cam bolt and bracket.
 - (b) Remove the nut, washer, cam plate and bolt.
 - (c) Remove the 2 nuts and strut bar from the lower suspension arm.