


## Neutral Start Switch Circuit

### CIRCUIT DESCRIPTION

The neutral start switch detects whether the shift position is in P range or in other ranges, and sends a signal to the ECU.

### WIRING DIAGRAM

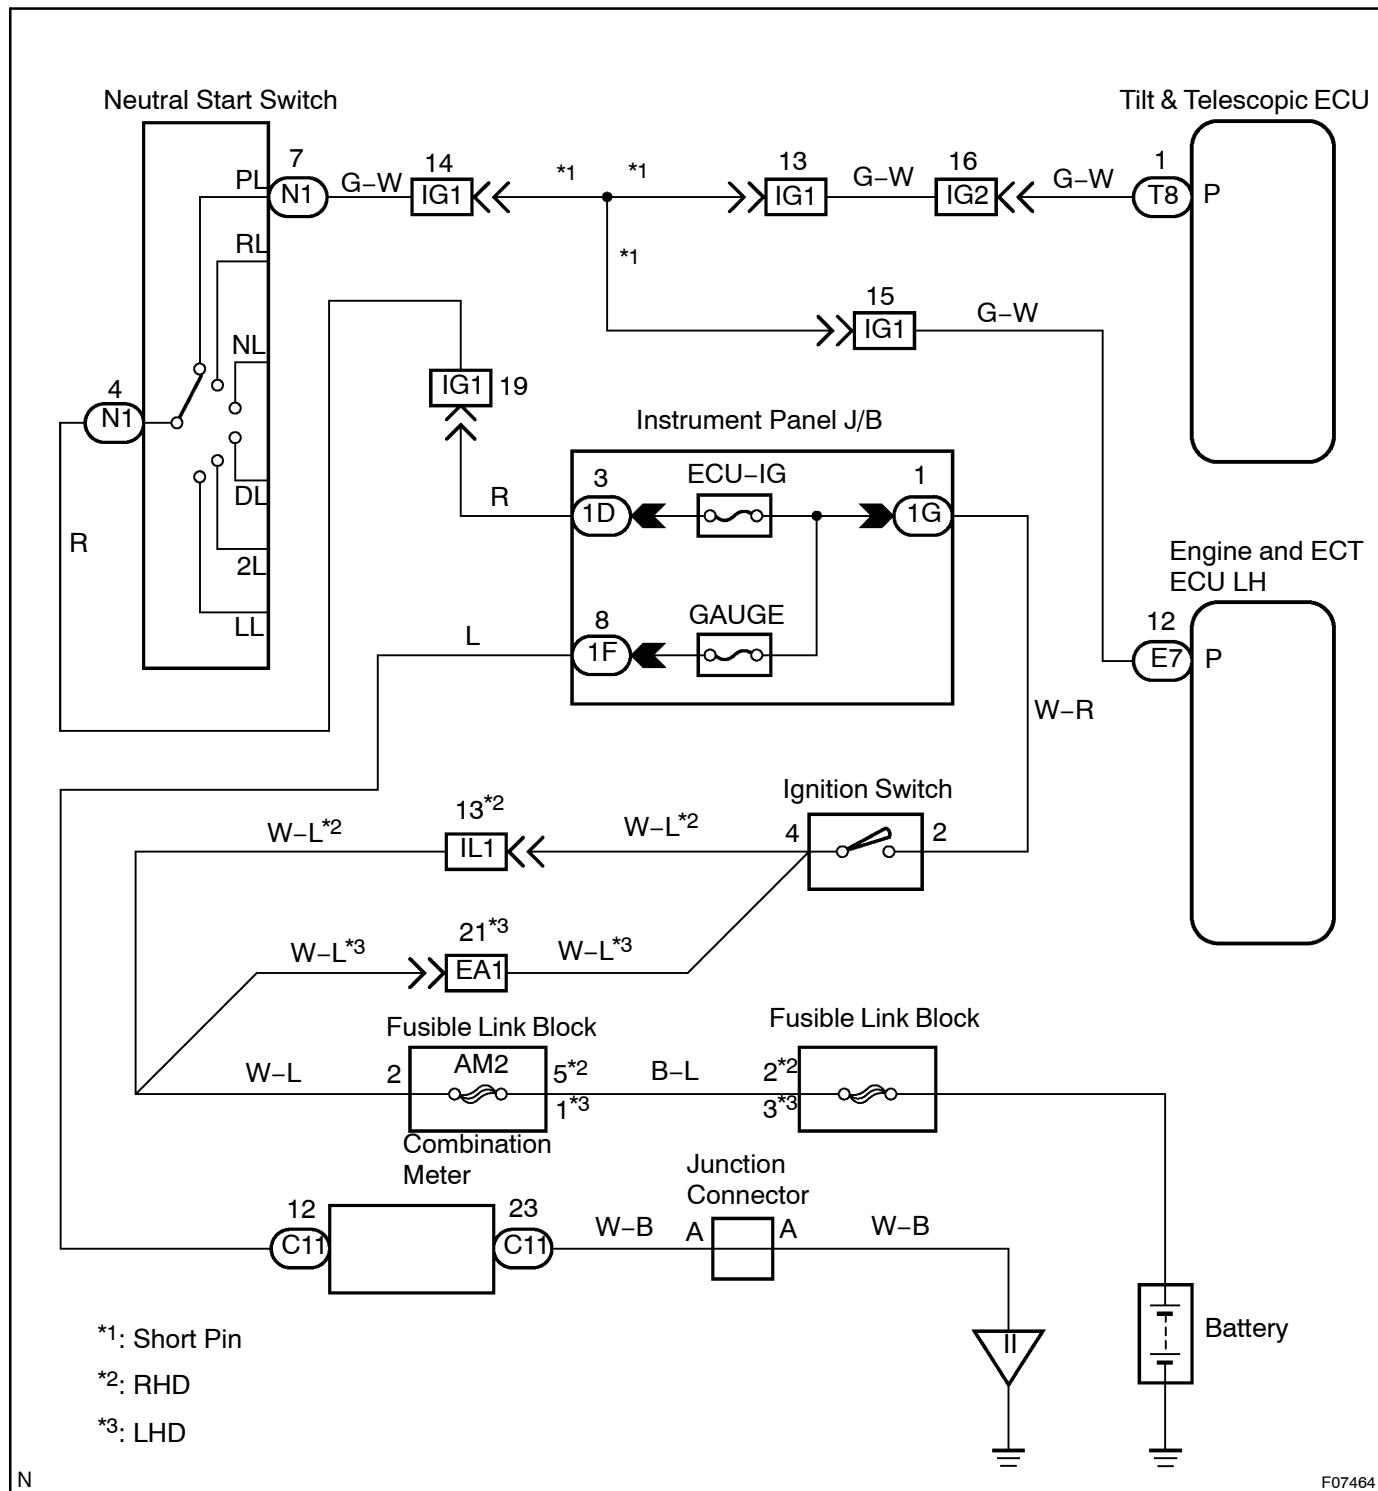

## INSPECTION PROCEDURE

- 1  Check shift position indicator.

### PREPARATION:


Check that "P" lights up on the shift indicator when P range is shifted into, and that "P" is extinguished when shifting into another range.



Check and repair shift position indicator  
(See page DI-454).

OK

- 2  Check voltage between terminal P of ECU connector and body ground.

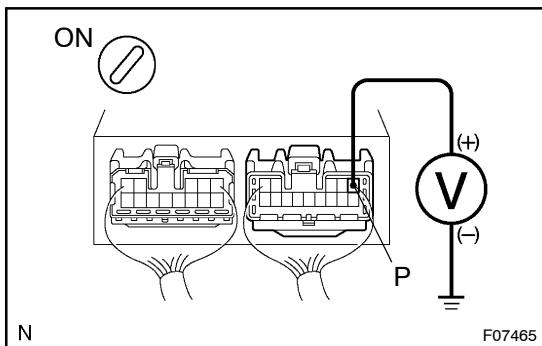

### PREPARATION:

Remove ECU with connectors still connected.

### CHECK:

- (a)  Turn Ignition switch ON.
- (b)  Measure the Voltage between Terminal P of ECU connector and body ground when the shift lever is operated.

### OK:

Shift position	Voltage (V)
P range	10 - 14
Other than P range	Below



Proceed to next circuit inspection shown on the problem symptoms table (See page DI-203).

NG

Check for open circuit in harness and connectors between ECU and IG1 connector.