

**PROBLEM SYMPTOMS TABLE****POWER WINDOW CONTROL SYSTEM**

Symptom	Suspect Area	See page
All the power windows does not operate.	1. PWS circuit 2. Power window master switch circuit 3. Body ECU	DI-540 DI-559 IN-30
Power window does not operate.	1. Power window master switch circuit 2. Power window motor circuit 3. Driver door ECU	DI-559 DI-572 IN-30
Auto Up (or down) function does not operate.	1. Power window master switch circuit 2. Driver door ECU	DI-559 IN-30
Jam protection function (and auto Up (or down) function) does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Driver door ECU	DI-574 DI-576 IN-30

**INTERIOR LIGHT SYSTEM:**

Symptom	Suspect Area	See page
The interior light does not come on when the driver's door is opened.	1. Driver door courtesy switch circuit 2. Interior light system	DI-569 IN-30
The interior light does not fade out immediately when all the doors are locked within 15 seconds after they are closed.	1. Door unlock detection switch circuit 2. Interior light system	DI-564 IN-30

**POWER DOOR LOCK CONTROL SYSTEM:**

Symptom	Suspect Area	See page
All the doors cannot be locked or unlocked. (Power window control system is normal)	1. Door lock control switch circuit (in master switch) 2. Power door lock control system	DI-559 IN-30
Only one side door lock control does not operate.	1. Door lock motor circuit 2. Power door lock control system	DI-562 IN-30
Door key related function does not operate.	1. Door key lock and unlock switch 2. Door unlock detection switch circuit 3. Power door lock control system	DI-566 DI-564 IN-30
Key confinement prevention function does not operate.	1. Door courtesy switch circuit 2. Door unlock detection switch circuit 3. Power door lock control system	DI-569 DI-564 IN-30

**WIRELESS DOOR LOCK CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Lock or unlock function does not operate.	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Wireless door lock control system	DI-566 DI-564 IN-30
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system.	1. Door courtesy switch circuit 2. Wireless door lock control system	DI-569 IN-30

**OTHERS**

Symptom	Suspect Area	See page
Parts of the door does not function.	1. Power source circuit 2. Driver door ECU	DI-555 IN-30
Auto turn-off system does not operate.	1. Driver door courtesy switch circuit 2. Headlight and taillight system	DI-569 IN-30