

REMOVAL

1. REMOVE FRONT SEAT OUTER BELT ANCHOR


- (a) Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the front seat outer belt anchor.

Torque: 41 N·m (420 kgf·cm, 31 ft·lbf)

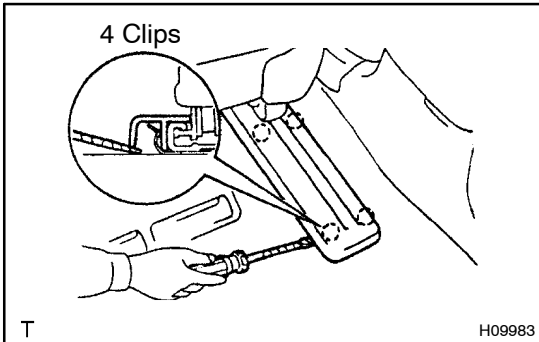

2. REMOVE SEAT TRACK COVER

- (a) Using a screwdriver, remove the seat track cover.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

3. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.

Torque: 61 N·m (620 kgf·cm, 45 ft·lbf)

- (b) Disconnect the connector.

NOTICE:

When disconnecting the front side airbag connector take care not to damage the airbag wire harness.

- (c) Remove the front seat.

NOTICE:

Be careful not to damage the body.