


# VSC Warning Buzzer Circuit

## CIRCUIT DESCRIPTION

The VSC warning buzzer sounds during VSC operation.

## WIRING DIAGRAM

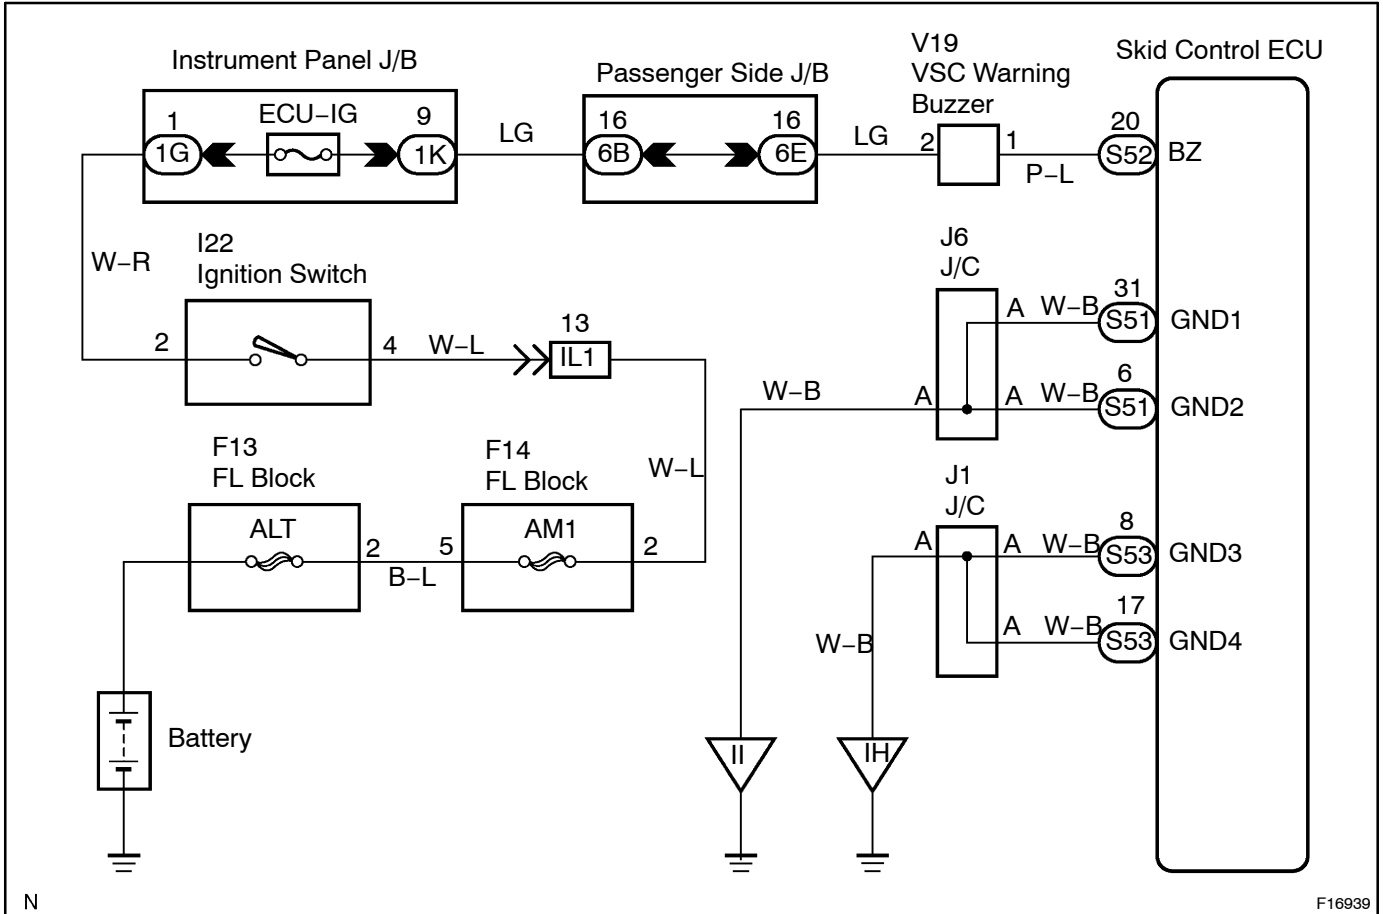

N

F16939

## INSPECTION PROCEDURE

### HINT:

Start inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

### 1 Check operation of the VSC warning buzzer.

#### PREPARATION:

- Connect the hand-held tester to the DLC3.
- Turn the ignition switch to ON and turn the hand-held tester main switch to ON.
- Select the ACTIVE TEST mode on the hand-held tester.

#### CHECK:


Check "beep, beep" sound of the VSC warning buzzer by the hand-held tester.

OK

Check and replace skid control ECU.

NG

### 2 Check VSC warning buzzer.

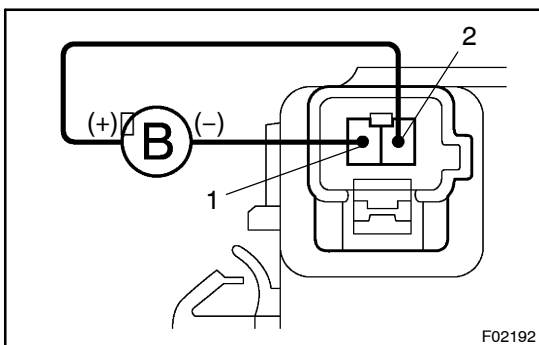

#### PREPARATION:

Disconnect the VSC warning buzzer connector.

#### CHECK:

Apply battery voltage to the terminals 1 and 2 of VSC warning buzzer connector. Check that the VSC warning buzzer sounds.

NG

Replace the VSC warning buzzer.

OK

### 3 Check for open and short circuit in harness and connector between skid control ECU and the VSC warning buzzer (See page IN-31).

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.