

DIFFERENTIAL MOUNTING CUSHION REPLACEMENT 1. REMOVE DIFFERENTIAL CARRIER


REMOVE DIFFERENTIAL CARRIER (See page SA-75)

2. REMOVE DIFFERENTIAL MOUNTING CUSHION

Using SST, remove the cushion. HINT:

- Check that the edge of SST (09527–17011) is fully contact with the crossmember.
- Align the SST straight so that the bolt of the SST is on the center line of the cushion.

SST 09527-17011, 09570-22011, 09570-24010

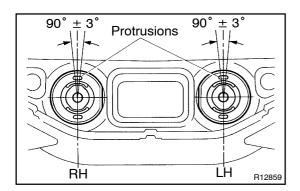


3. INSTALL DIFFERENTIAL MOUNTING CUSHION

(a) Set a new differential mounting cushion to the crossmember.

HINT:

R12865

- Install the cushion with the flat face facing inside of the vehicle.
- Position the cushion so that the upper and lower protrusions align horizontally at 90° \pm 3° against the ground.

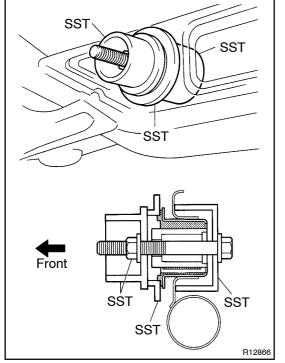

(b) Using SST, install the cushion.

```
SST 09316-12010, 09570-22011, 09570-24010
```

HINT:

Align the SST straight so that the bolt of the SST is on the center line of the cushion.

4. INSTALL DIFFERENTIAL CARRIER (See page SA-94)



SA-95