



ADJUSTMENT

1. PREPARATION

- (a) Adjust the tire pressure to the specified range.
- (b) One co-worker gets on the driver's seat.
- (c) Start the engine and set the battery to the charged state.

2. ADJUSTMENT LIGHT AXIS

- (a) Disconnect the sub travel beam connector.
- (b) Adjust the main travel beam axis according to the adjustment procedure for the head light tester in use.

NOTICE:

Always adjust the aiming screw in the tightening direction. (If adjustment in the loosening direction is needed, once loosen sufficiently and then adjust in the tightening direction.)

3. INSPECT INTENSITY

After the beam axis adjustment, check intensity using the head light tester.

Standard: 12,000 candela or more