


R12591

REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the trim luggage compartment front cover.
- (b) Disconnect the speed sensor connector, and pull out the sensor wire harness with the grommet.

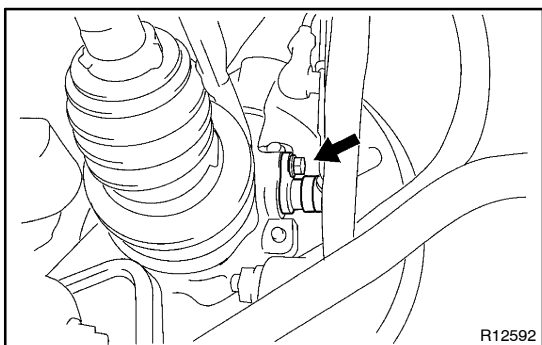

R12592

2. REMOVE SPEED SENSOR

- (a) Remove the 3 clamp bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)
- (b) Remove the resin clip and 3 clamps from the upper arm and body.
- (c) Right wheel:
Disconnect the pad wear indicator connector from the speed sensor.
- (d) Remove the speed sensor from the axle carrier.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)