

J POWER SOURCE (Current Flow Chart)

Instrument Panel J/B (See Page 80)

Fuse		System	Page
7.5A	ECU-IG	ABS (LHD)	428
		ABS (RHD)	434
		Back-Up Light	246
		Charging	174
		Cruise Control	412
		ECT and A/T Indicator	404
		Power Seat (Rear)	452
		Power Tilt and Power Telescopic	378
		PPS	382
		Remote Control Curtain	374
		Shift Lock	384
Wiper and Washer	312		
7.5A	EFI NO.2 RH	Engine Control (Right Bank Control)	188
7.5A	IGN	Cruise Control	412
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
		Engine Immobiliser System	200
		SRS	439
7.5A	PANEL	Clock	396
		Illumination (LHD)	218
		Illumination (RHD)	226
7.5A	STARTER	ECT and A/T Indicator	404
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
		Starting	170
7.5A	STOP-S	ABS (LHD)	428
		ABS (RHD)	434
		Cruise Control	412
		ECT and A/T Indicator	404
		Electronically Modulated Air Suspension	420
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
		Multiplex Communication System (Body ECU)	266
		Power Seat (Rear)	452
		Shift Lock	384
		Stop Light	242
Wiper and Washer	312		
7.5A	TAIL	Front Fog Light	206
		Multiplex Communication System (Rear Light ECU)	304
		Taillight	214
7.5A	TURN	Cornering Light	208
		Multiplex Communication System (Body ECU)	266

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	TURN	Turn Signal and Hazard Warning Light	210
10A	HEATER	Automatic Air Conditioner	490
		Engine Control (Left Bank Control)	176
		Rear Window Defogger and Mirror Heater	482
10A	RADIO NO.2	Auto Antenna	470
		Automatic Air Conditioner	490
		Clock	396
		Multiplex Communication System (Body ECU)	266
		Radio and Player	472
		Remote Control Mirror	388
		Shift Lock	384
15A	FR CIG	Cigarette Lighter	398
		SRS	439
15A	FR FOG	Front Fog Light	206
15A	FR S/HTR	Seat Heater	462
15A	GAUGE	ABS (LHD)	428
		ABS (RHD)	434
		Back-Up Light	246
		Combination Meter	484
		Cruise Control	412
		ECT and A/T Indicator	404
		Electronically Modulated Air Suspension	420
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
		Interior Light	234
		Key Reminder and Seat Belt Warning	362
		Multiplex Communication System (Combination Meter)	278
		PPS	382
		Rear Fog Light	250
Stop Light	242		
Taillight	214		
15A	PWR-IG	Auto Antenna	470
		Automatic Glare-Resistant EC Mirror	392
		Automatic Light Control	254
		Cellular Mobile Telephone	478
		Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		Electronically Modulated Air Suspension	420
		Illumination (LHD)	218
		Illumination (RHD)	226
		Key Reminder and Seat Belt Warning	362
		Light Auto Turn Off	258
		Multiplex Communication System (Body ECU)	266
Multiplex Communication System (Door ECU) (LHD)	282		

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	PWR-IG	Multiplex Communication System (Door ECU) (RHD)	290
		Multiplex Communication System (Rear J/B ECU)	298
		Multiplex Communication System (Rear Light ECU)	304
		Power Seat (Rear)	452
		Power Tilt and Power Telescopic	378
		Power Window (LHD)	318
		Power Window (RHD)	326
		Rear Air Conditioner	502
		Remote Control Curtain	374
		Shift Lock	384
		Vibration Seat	468
		Wireless Door Lock Control (LHD)	350
		Wireless Door Lock Control (RHD)	356
15A	RR CIG	Automatic Air Conditioner	490
		Cigarette Lighter	398
15A	RR S/HTR	Seat Heater	462
20A	AIR SUS	Electronically Modulated Air Suspension	420
20A	DOOR FR LH	Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		Interior Light	234
		Multiplex Communication System (Door ECU) (LHD)	282
		Multiplex Communication System (Door ECU) (RHD)	290
		Power Window (LHD)	318
		Power Window (RHD)	326
		Wireless Door Lock Control (LHD)	350
Wireless Door Lock Control (RHD)	356		
20A	DOOR FR RH	Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		Interior Light	234
		Multiplex Communication System (Door ECU) (LHD)	282
		Multiplex Communication System (Door ECU) (RHD)	290
		Power Window (LHD)	318
		Power Window (RHD)	326
		Wireless Door Lock Control (LHD)	350
Wireless Door Lock Control (RHD)	356		
20A	WIPER	Multiplex Communication System (Body ECU)	266
		Wiper and Washer	312
30A	SEAT FR RH	Power Seat (Front) (LHD)	444
		Power Seat (Front) (RHD)	448
		Power Shoulder Belt Anchorage	386
30A	TILT & TSC	Power Tilt and Power Telescopic	378

* These are the page numbers of the first page on which the related system is shown.

Engine Room J/B (See Page 84)

Fuse		System	Page
7.5A	A/C	Automatic Air Conditioner	490
7.5A	ALT-S	Charging	174
7.5A	DOME	Clock	396
		Interior Light	234
		Multiplex Communication System (Body ECU)	266
7.5A	ECU-B	Combination Meter	484
		Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		ECT and A/T Indicator	404
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
		Engine Immobiliser System	200
		Interior Light	234
		Key Reminder and Seat Belt Warning	362
		Multiplex Communication System (Body ECU)	266
		Multiplex Communication System (Combination Meter)	278
		Power Tilt and Power Telescopic	378
		Power Window (LHD)	318
		Power Window (RHD)	326
		Rear Fog Light	250
		SRS	439
		Wireless Door Lock Control (LHD)	350
Wireless Door Lock Control (RHD)	356		
7.5A	EFI NO.2 LH	Engine Control (Left Bank Control)	176
7.5A	MPX-B	ABS (LHD)	428
		ABS (RHD)	434
		Automatic Air Conditioner	490
		Automatic Light Control	254
		Back-Up Light	246
		Combination Meter	484
		Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		ECT and A/T Indicator	404
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
		Interior Light	234
		Key Reminder and Seat Belt Warning	362
		Light Auto Turn Off	258
		Multiplex Communication System (Body ECU)	266
		Multiplex Communication System (Combination Meter)	278
		Multiplex Communication System (Door ECU) (LHD)	282
Multiplex Communication System (Door ECU) (RHD)	290		
Power Window (LHD)	318		

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	MPX-B	Power Window (RHD)	326
		Rear Fog Light	250
		Stop Light	242
		Taillight	214
		Wiper and Washer	312
		Wireless Door Lock Control (LHD)	350
		Wireless Door Lock Control (RHD)	356
10A	H-LP L LWR	Headlight	204
10A	H-LP R LWR	Headlight	204
10A	HORN	Horn	394
10A	THRO LH	Cruise Control	412
		Engine Control (Left Bank Control)	176
10A	THRO RH	Cruise Control	412
		Engine Control (Right Bank Control)	188
15A	HAZ	Turn Signal and Hazard Warning Light	210
15A	MIR HTR	Rear Window Defogger and Mirror Heater	482
20A	H-LP L UPR	Headlight	204
20A	H-LP R UPR	Combination Meter	484
		Headlight	204
		Multiplex Communication System (Combination Meter)	278
25A	EFI NO.1	Cruise Control	412
		ECT and A/T Indicator	404
		Engine Control (Left Bank Control)	176
		Engine Control (Right Bank Control)	188
30A	ST	Starting	170

Luggage Room J/B (See Page 88)

Fuse		System	Page
10A	FUEL OPN	Fuel Lid Opener	366
		Luggage Compartment Door Opener and Closer	368
		Multiplex Communication System (Rear J/B ECU)	298
10A	RR ACC	Multiplex Communication System (Rear J/B ECU)	298
		Power Outlet	402
		Radio and Player	472
10A	RR ECU-B	Automatic Air Conditioner	490
		Interior Light	234
		Luggage Compartment Door Opener and Closer	368
		Multiplex Communication System (Rear J/B ECU)	298
		Power Seat (Rear)	452
		Radio and Player	472
Rear Air Conditioner	502		
10A	RR IG	Auto Antenna	470
		Cellular Mobile Telephone	478
		Door Lock Control (LHD)	336

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	RR IG	Door Lock Control (RHD)	342
		Multiplex Communication System (Door ECU) (LHD)	282
		Multiplex Communication System (Door ECU) (RHD)	290
		Multiplex Communication System (Rear J/B ECU)	298
		Power Seat (Rear)	452
		Power Window (LHD)	318
		Power Window (RHD)	326
		Rear Air Conditioner	502
		Remote Control Curtain	374
		Vibration Seat	468
		Wireless Door Lock Control (LHD)	350
		Wireless Door Lock Control (RHD)	356
10A	RR MPX-B	Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		Fuel Lid Opener	366
		Luggage Compartment Door Opener and Closer	368
		Multiplex Communication System (Body ECU)	266
		Multiplex Communication System (Door ECU) (LHD)	282
		Multiplex Communication System (Door ECU) (RHD)	290
		Multiplex Communication System (Rear J/B ECU)	298
		Multiplex Communication System (Rear Light ECU)	304
		Power Outlet	402
		Power Window (LHD)	318
		Power Window (RHD)	326
		Radio and Player	472
		Rear Air Conditioner	502
		Wireless Door Lock Control (LHD)	350
Wireless Door Lock Control (RHD)	356		
10A	STOP & TAIL 1	Multiplex Communication System (Rear Light ECU)	304
		Stop Light	242
		Taillight	214
10A	STOP & TAIL 2	Multiplex Communication System (Rear Light ECU)	304
		Stop Light	242
		Taillight	214
10A	STOP & TAIL 3	Back-Up Light	246
		Multiplex Communication System (Rear Light ECU)	304
		Rear Fog Light	250
		Stop Light	242
		Taillight	214
10A	STOP & TAIL 4	Back-Up Light	246
		Multiplex Communication System (Rear Light ECU)	304
		Rear Fog Light	250
		Stop Light	242
		Taillight	214

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
20A	DOOR RR LH	Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		Interior Light	234
		Multiplex Communication System (Door ECU) (LHD)	282
		Multiplex Communication System (Door ECU) (RHD)	290
		Power Window (LHD)	318
		Power Window (RHD)	326
		Rear Door Closer	372
		Wireless Door Lock Control (LHD)	350
		Wireless Door Lock Control (RHD)	356
20A	DOOR RR RH	Door Lock Control (LHD)	336
		Door Lock Control (RHD)	342
		Interior Light	234
		Luggage Compartment Door Opener and Closer	368
		Multiplex Communication System (Door ECU) (LHD)	282
		Multiplex Communication System (Door ECU) (RHD)	290
		Multiplex Communication System (Rear J/B ECU)	298
		Power Window (LHD)	318
		Power Window (RHD)	326
		Rear Door Closer	372
Wireless Door Lock Control (LHD)	350		
Wireless Door Lock Control (RHD)	356		
20A	RR LAMP LH	Multiplex Communication System (Rear Light ECU)	304
20A	RR LAMP RH	Multiplex Communication System (Rear Light ECU)	304
20A	TEL	Cellular Mobile Telephone	478
30A	SEAT FR LH	Power Seat (Front) (LHD)	444
		Power Seat (Front) (RHD)	448
		Power Shoulder Belt Anchorage	386
30A	SEAT RR LH	Power Seat (Rear)	452
30A	SEAT RR RH	Power Seat (Rear)	452

Engine Room R/B (See Page 96)

Fuse		System	Page
20A	RADIO NO.1	Auto Antenna	470
		Radio and Player	472
40A	AIR SUS	Electronically Modulated Air Suspension	420

Fusible Link Block (F14 on See Page 97)

Fuse		System	Page
30A	HTR	Automatic Air Conditioner	490
60A	ABS	ABS (LHD)	428
		ABS (RHD)	434
80A	INP J/B	Automatic Light Control	254
		Illumination (LHD)	218

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
80A	INP J/B	Illumination (RHD)	226
		Light Auto Turn Off	258
		Multiplex Communication System (Body ECU)	266
		Multiplex Communication System (Rear Light ECU)	304
		Taillight	214

Fusible Link Block (F13 on See Page 97)

Fuse		System	Page
40A	DEF	Automatic Air Conditioner	490
		Rear Window Defogger and Mirror Heater	482
80A	MAIN	Automatic Light Control	254
		Charging	174
		Headlight	204
		Light Auto Turn Off	258
		Multiplex Communication System (Body ECU)	266
140A	ALT	Charging	174
		Illumination (LHD)	218
		Illumination (RHD)	226
		Multiplex Communication System (Body ECU)	266
		Multiplex Communication System (Rear Light ECU)	304
	Taillight	214	

Fuse Block (F18 on See Page 80)

Fuse		System	Page
10A	INJ-L	Engine Control (Left Bank Control)	176
		Ignition	172
10A	INJ-R	Engine Control (Right Bank Control)	188
		Ignition	172

* These are the page numbers of the first page on which the related system is shown.