

## PROBLEM SYMPTOMS TABLE

| Symptom  | Suspect Area  | See page  |
|--|---|---|
| Rear combination light does not light up. (All)  | <ol style="list-style-type: none"> <li>1. Power source circuit</li> <li>2. Ignition switch power source circuit</li> <li>3. Rear light ECU LH and RH</li> </ol> | <a href="#">DI-694</a><br><a href="#">DI-696</a><br><a href="#">IN-30</a> |
| Both left and right taillight does not light up. | <ol style="list-style-type: none"> <li>1. Taillight and stop light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>                                      | <a href="#">DI-698</a><br><a href="#">IN-30</a>                           |
| Only one taillight does not light up.            | <ol style="list-style-type: none"> <li>1. Taillight and stop light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>                                      | <a href="#">DI-698</a><br><a href="#">IN-30</a>                           |
| Both left and right does not light up.           | <ol style="list-style-type: none"> <li>1. Taillight and stop light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>                                      | <a href="#">DI-698</a><br><a href="#">IN-30</a>                           |
| Only one stop light does not light up.           | <ol style="list-style-type: none"> <li>1. Taillight and stop light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>                                      | <a href="#">DI-698</a><br><a href="#">IN-30</a>                           |
| Back-up light does not light up.                 | <ol style="list-style-type: none"> <li>1. Back-up light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>   | <a href="#">DI-700</a><br><a href="#">IN-30</a>                           |
| License light does not light up.                 | <ol style="list-style-type: none"> <li>1. License light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>   | <a href="#">DI-702</a><br><a href="#">IN-30</a>                           |
| Hi-mounted stop light does not light up.         | <ol style="list-style-type: none"> <li>1. Hi-mounted stop light circuit</li> <li>2. Rear light ECU LH and RH</li> </ol>   | <a href="#">DI-704</a><br><a href="#">IN-30</a>                           |