



REPLACEMENT

OBSERVE THE FOLLOWING PRECAUTIONS WHEN REPLACING THE LIGHT BULB:

- (a) When the halogen lamp (head and fog lights) surface is contaminated by oil, the lamp service life is shortened as it becomes hot when it is turned on.
Hold the flange when replacing a bulb so that your hands will not contact the glass.
- (b) Since the internal pressure of a halogen lamp bulb (head and fog lights) is high, carefully handle it as dropping a bulb may cause an explosion with jumping glass chips.
- (c) When the lens are held with the bulb being removed for a long period of time, the lens may be contaminated by dirt or moisture. So, begin the work after preparing a new one when replacing a bulb.
- (d) Always use a replacement bulb having the same watt rating.
- (e) Firmly reinstall the socket after bulb replacement.
Otherwise, cloudy lens or invasion by water will occur