

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


#### HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount: 1,000 ± 50 g (35.27 ± 1.76 oz.)**

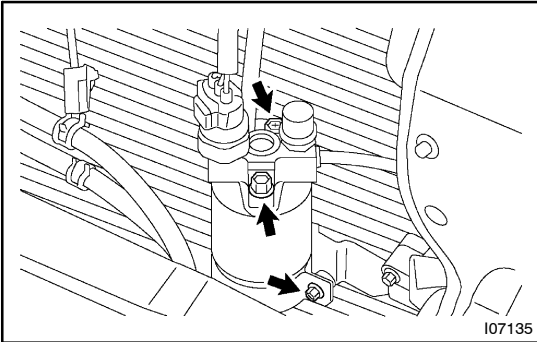

### 2. DISCONNECT 2 LIQUID TUBES

Remove the 2 bolts and disconnect the both tubes.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

#### NOTICE:

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

#### HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install the tubes.

### 3. REMOVE RECEIVER

Remove the holder bolt and pull out the receiver.

#### HINT:

At the time of installation, please refer to the following item.

If receiver is replaced, add compressor oil to receiver.

**Add 10 cc (0.34 fl.oz.)**

**Compressor oil: ND-OIL 8 or equivalent**