


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

HINT:

For step 2 to 4, refer to [page BO-149](#).

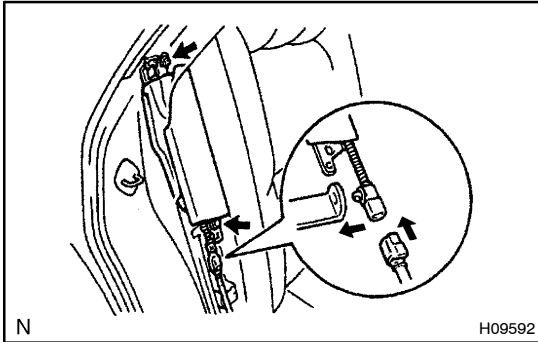

1. INSTALL REAR SIDE AIRBAG ASSEMBLY

- (a) Install the rear side airbag assembly with the 2 bolts.
Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)
- (b) Engage the clamp and connect the connector of the rear side airbag assembly.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

2. INSTALL REAR SEATBACK STAY COVER
3. INSTALL REAR SIDE SEATBACK ASSEMBLY
4. INSTALL REAR DOOR SCUFF PLATE