


# CIRCUIT OPENING RELAY INSPECTION

SF11L-01

## 1. REMOVE CIRCUIT OPENING RELAY (Marking: CIR OPN)

LOCATION: In the engine compartment relay box.

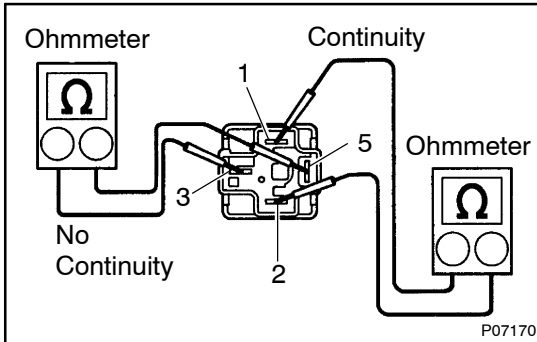


## 2. INSPECT CIRCUIT OPENING RELAY CONTINUITY

- (a) Using an ohmmeter, check that continuity exists between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that no continuity exists between terminals 3 and 5.

If continuity exists, replace the relay.

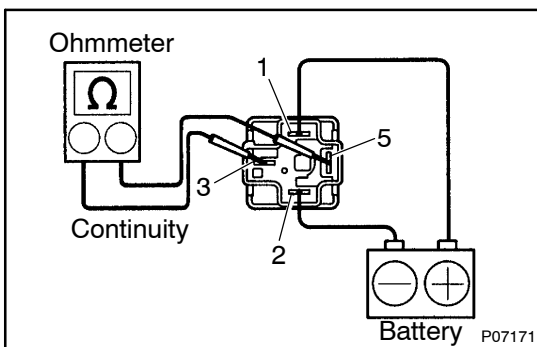

## 3. INSPECT CIRCUIT OPENING RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that continuity exists between terminals 3 and 5.

If no continuity exists, replace the relay.

## 4. REINSTALL CIRCUIT OPENING RELAY