

## INSTALLATION

### 1. INSTALL FUEL PRESSURE REGULATOR

- (a) Install the pressure regulator with a new O-ring.

**Torque: 30 N·m (305 kgf·cm, 22 ft·lbf)**

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81 in.).

- (b) Connect the return tube and install the union bolt with 2 new gaskets.

**Torque: 30 N·m (305 kgf·cm, 22 ft·lbf)**

- (c) Connect the vacuum hose.

### 2. INSTALL AIR CLEANER ASSEMBLY LH WITH AIR FLOW METER, V-BANK COVER AND AIR CLEANER INLET NO.1