


FUEL PUMP RELAY INSPECTION

SF11M-01

1. REMOVE FUEL PUMP RELAY (Marking: FUEL PUMP)

LOCATION: In the engine compartment relay box.

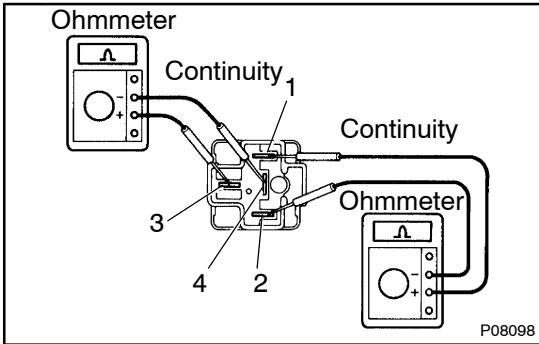


2. INSPECT FUEL PUMP RELAY CONTINUITY

(a) Using an ohmmeter, check that continuity exists between terminals 1 and 2.

If no continuity exists, replace the relay.

(b) Check that there is continuity between terminals 3 and 4.

If no continuity exists, replace the relay.

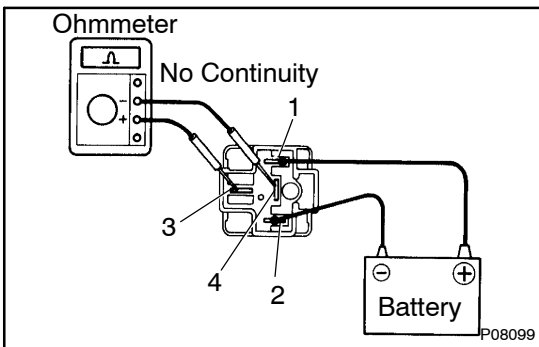

3. INSPECT FUEL PUMP RELAY OPERATION

(a) Apply battery voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that no continuity exists between terminals 3 and 4.

If continuity exists, replace the relay.

4. REINSTALL FUEL PUMP RELAY