

**PROBLEM SYMPTOMS TABLE**

Symptom	Suspect Area	See page
Check of communication between combination meter and body control ECU.	1	<a href="#">DI-455</a>
Messages are not indicated correctly.	2	<a href="#">DI-457</a>
The entire meter does not operate. (Partial normal operations).	3	<a href="#">DI-458</a>
Non-lighting of meter illumination and pointer. (Water temperature and fuel sender gauge)	4	<a href="#">DI-459</a>
Meter illumination is dark at cold weather.	5	<a href="#">DI-461</a>
Intensity of meter and pointer illuminations does not change by adjusting the light control rheostat.	6	<a href="#">DI-462</a>
Speedometer remains at 0 km/h (0 mph) position.	7	<a href="#">DI-463</a>
Tachometer remains indicating "---r/min".	8	<a href="#">DI-465</a>
Water temperature gauge stays at the same position.	9	<a href="#">DI-466</a>
Fuel receiver gauge stops at the same position or does not function correctly.	10	<a href="#">DI-467</a>
Warning indicator remains lighting.	11	<a href="#">DI-469</a>
Multi-information display continuously indicates a warning.	12	<a href="#">DI-470</a>
Ambient temperature indication remains at "°C", "--°C".	13	<a href="#">DI-472</a>
You cannot enter the diagnostic mode.	14	<a href="#">DI-473</a>
Rear fog light indicator does not turn on.	15	<a href="#">DI-475</a>
Warning indicator does not turn on.	16	<a href="#">DI-477</a>
No indication of blown bulb even if rear combination light bulb has been blown.	17	<a href="#">DI-479</a>