

FUEL PRESSURE PULSATION DAMPER

SF119-01

REMOVAL

1. REMOVE V-BANK COVER
2. REMOVE FUEL PRESSURE PULSATION DAMPERS
 - (a) Remove pulsation damper and upper gasket.
 - (b) Disconnect the rear fuel pipe from the RH and LH delivery pipes, and remove the 2 lower gaskets.

CAUTION:

- Put a shop towel under the delivery pipe.
- Slowly loosen the pulsation damper.