


Fuel Lid Opener Solenoid Circuit

WIRING DIAGRAM

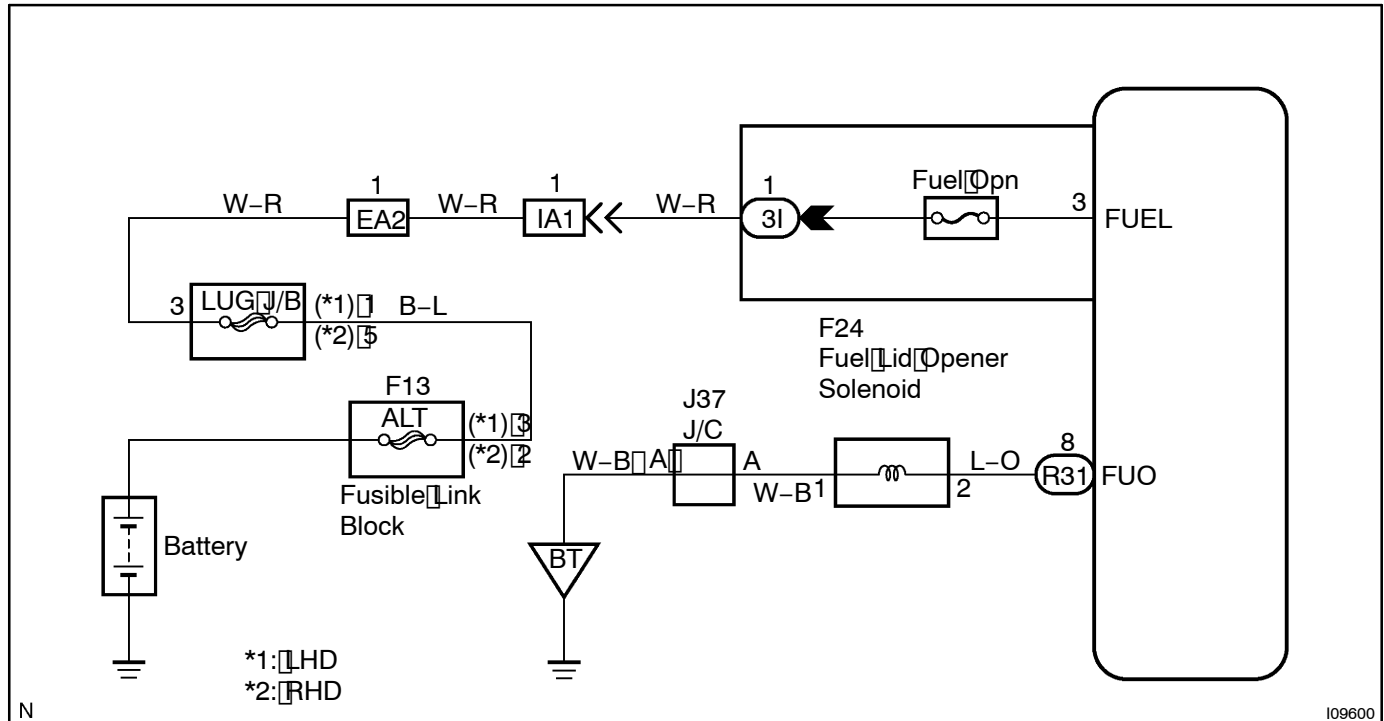

INSPECTION PROCEDURE

- 1 Check fuel lid opener solenoid (See page BE-151).

NG

Replace the luggage opener motor.

OK

- 2 Check wireharness and connector between luggage opener motor and rear J/B ECU (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-665).