


Stop light switch circuit

CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

WIRING DIAGRAM

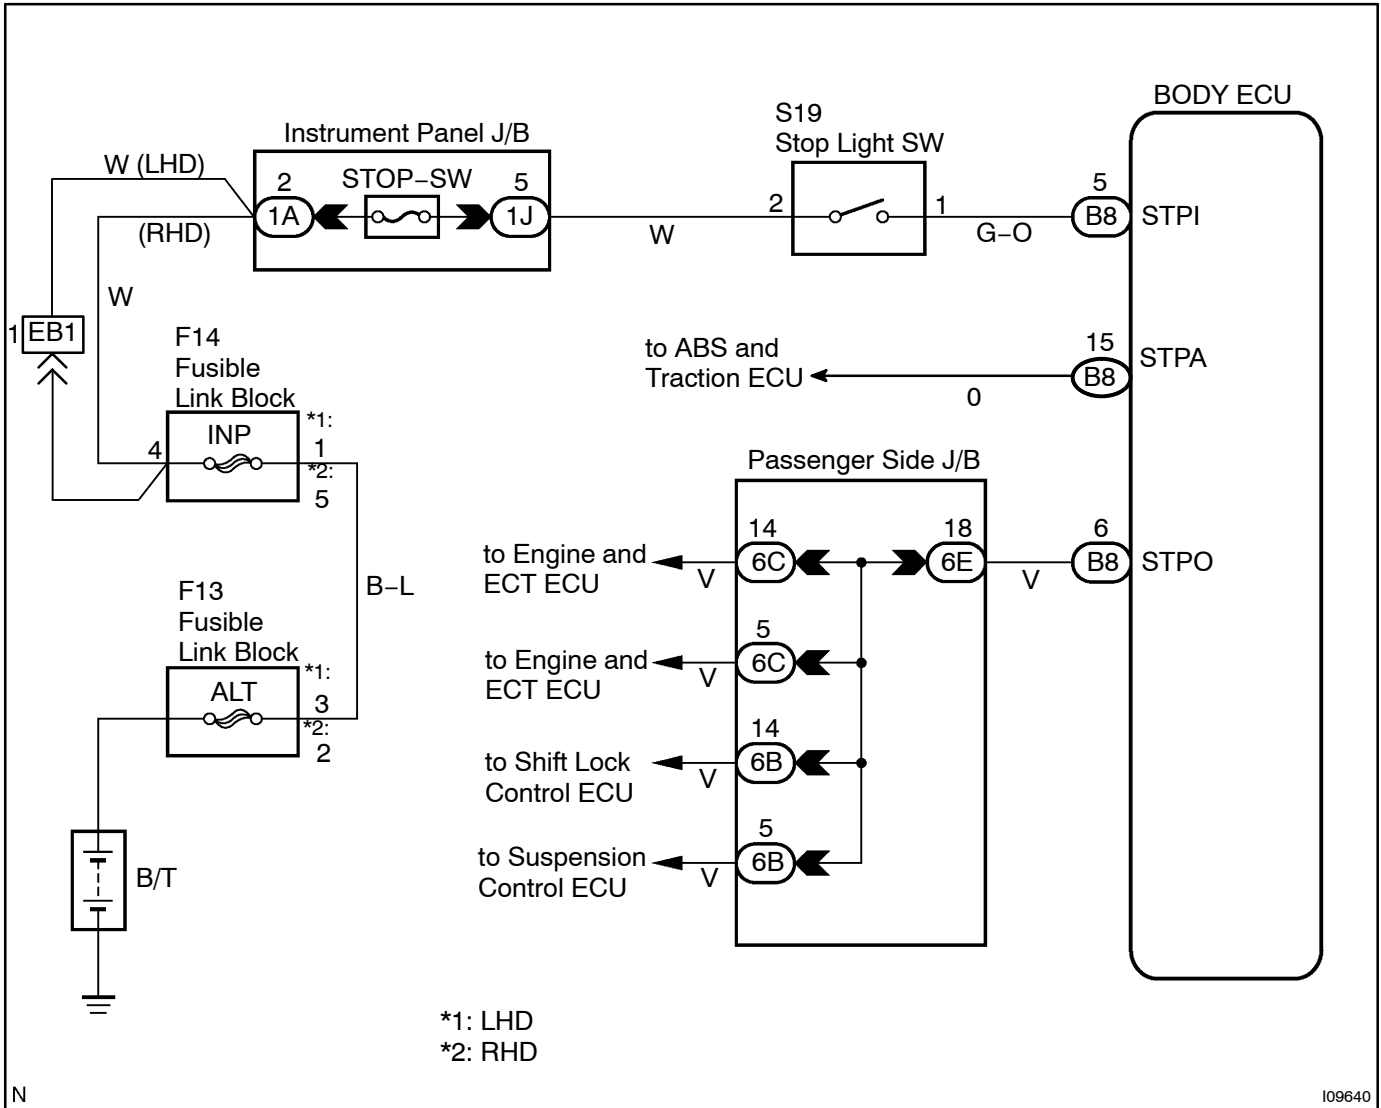

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check stop light switch using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check the stop light switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-488)

NG

2 Check stop light switch. (See page BE-46)

NG

Replace the stop light switch.

OK

3 Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-488).