


TERMINALS OF ECU

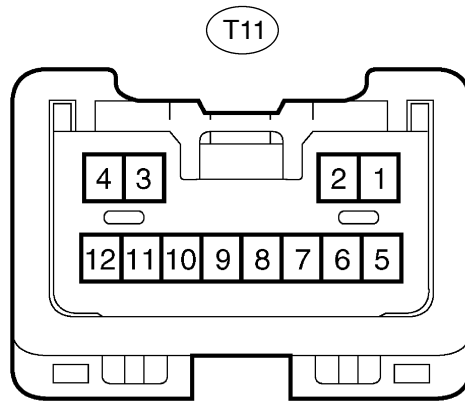

N

I10738

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
+B-GND (T11-1 - T11-12)	V-R - W-B	Constant	10 - 14 V
IG-GND (T11-2 - T11-12)	B-O - W-B	Ignition switch LOCK	Below 1 V
		Ignition switch ON	10 - 14 V
D-GND (T11-3 - T11-12)	P-L - W-B	Ignition switch ON Connect terminals TC and E1 of diagnosis check connector	Below 1 V
		Ignition switch ON	10 - 14 V
IND-GND (T11-5 - T11-12)	Y - W-B	Engine immobiliser system setting	Below 1 V
CTY-GND (T11-6 - T11-12)	R-W - W-B	Each door opened	Below 1 V
KSW-GND (T11-7 - T11-12)	P-G - W-B	Key unlock warning switch ON (Key inserted)	Below 1 V
		Key unlock warning switch OFF (Key removed)	10 - 14 V
EFII-GND (T11-8 - T11-12)	LG-R - W-B	Engine immobiliser system setting	5 V or below
EFIO-GND (T11-9 - T11-12)	L-R - W-B	Engine immobiliser system setting	5 V or below
GND-Body ground (T11-12 - Body ground)	W-B - Body ground	Constant	10 - 14 V