

WATER VALVE

AC00Y-01

ON-VEHICLE INSPECTION

1. **WARM UP ENGINE**
2. **DISCONNECT WATER VALVE CONTROL CABLE**
3. **INSPECT WATER VALVE OPERATION**
 - (a) Check that warm air is blown out of the vent when the water valve lever is moved to "warm" position.
 - (b) Check that cool air is blown out of the vent when the water valve lever is moved to "cool" position.

4. **CONNECT WATER VALVE CONTROL CABLE**

After connection, adjust the control cable (See page AC-85).