


INSTALLATION

Installation is in the reverse order of removal (See page AC-84).

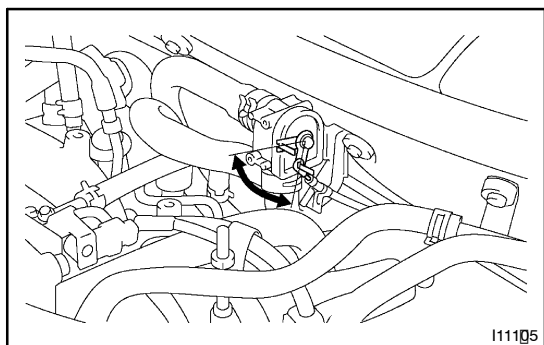


1. AFTER INSTALLATION, CHECK WATER VALVE OPERATION

- (a) Turn ignition switch to ON.
- (b) Operate temperature control switches to "MAX. COOL" and "MAX. WARM", then check that water valve operation, as shown in the illustration.

If operation is not as specified, next step.

2. ADJUST WATER VALVE CONTROL CABLE

- (a) Turn ignition switch to ON.
- (b) Disconnect the control cable.
- (c) Set temperature control switches "MAX. COOL".

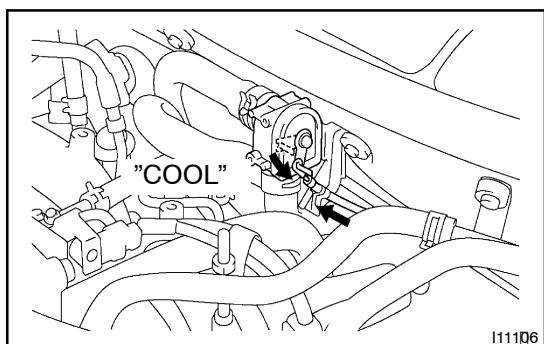

- (d) Set the water valve lever on "COOL" position, connect the control cable and lock the clamp.

HINT:

Lock the clamp while lightly pushing the outer cable in the direction, as shown in the illustration by an arrow.