

INSPECTION


1. INSPECT DISC, PLATE AND FLANGE

Check to see if the sliding surface of the disc, plate and flange are worn or burnt.

If necessary, replace them.


HINT:

- If the lining of the disc is peeling off or discolored, or even if a part of the printed numbers are defaced, replace all discs.
- Before assembling new discs, soak them in ATF for at least 15 minutes.

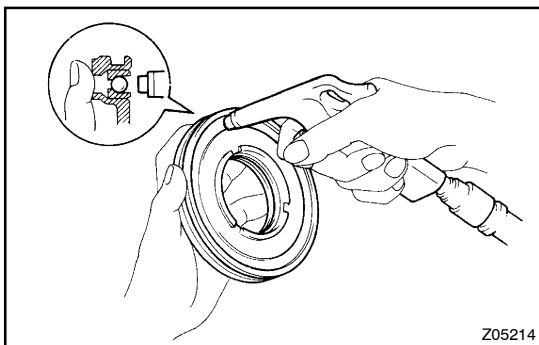

2. CHECK FORWARD CLUTCH PISTON

- Check that the check ball is free by shaking the piston.
- Check that the valve does not leak by applying low-pressure compressed air.

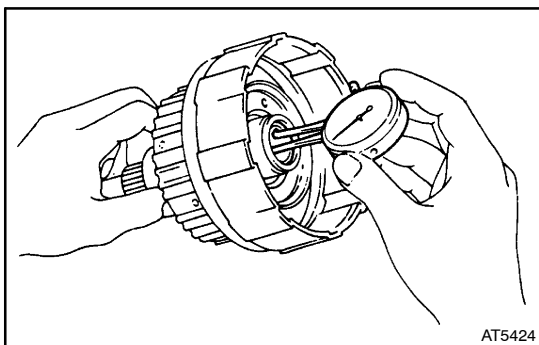

3. CHECK FORWARD CLUTCH DRUM BUSHING

Using a dial indicator, measure the inside diameter of the forward clutch drum bushing.

Maximum inside diameter: 24.08 mm (0.9480 in.)

If the inside diameter exceeds the maximum, replace the forward clutch drum.