J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

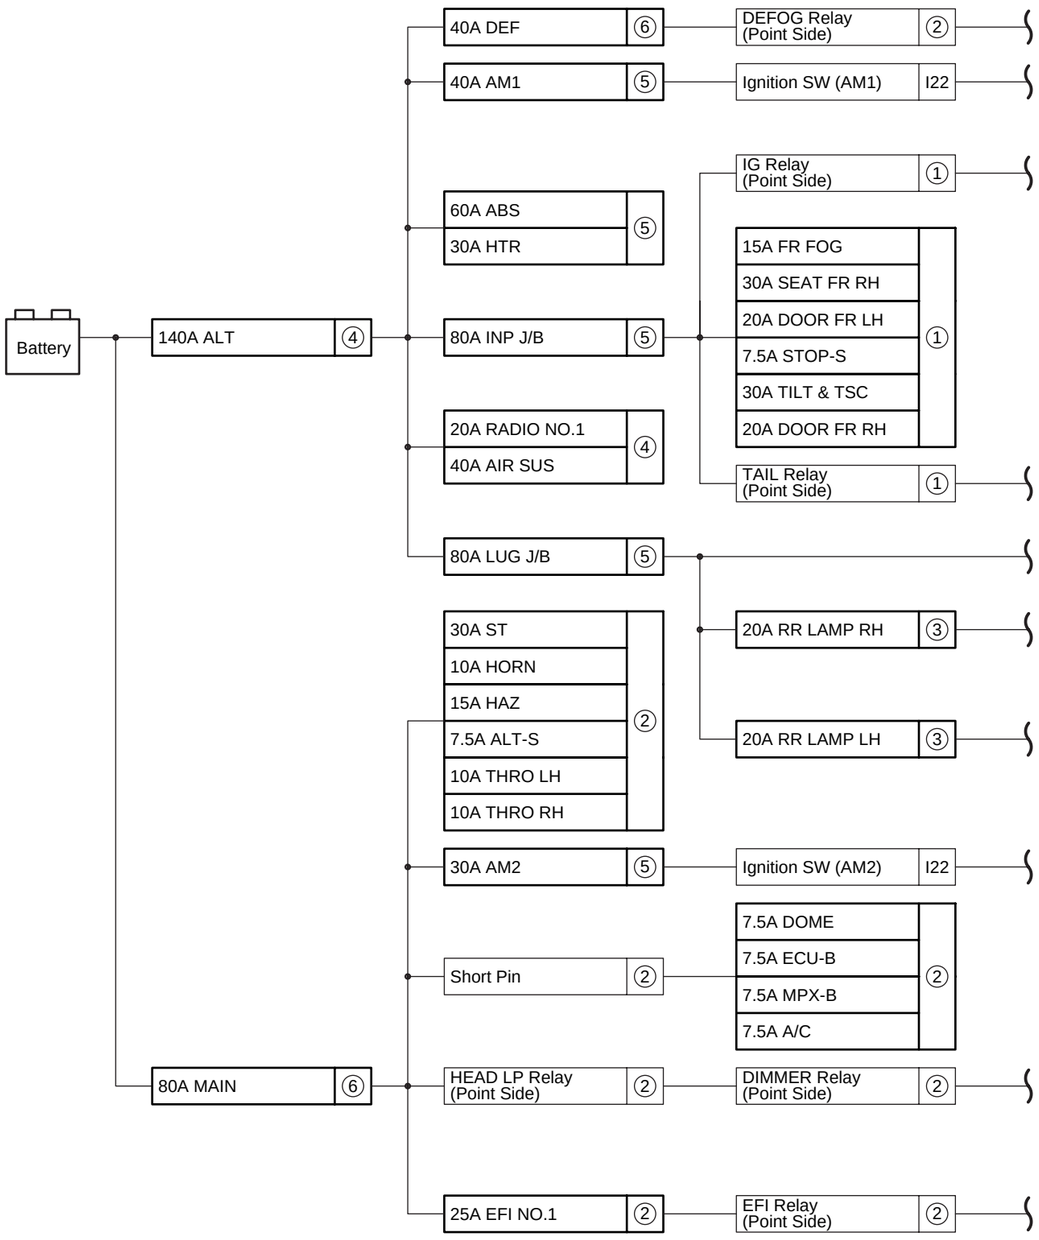

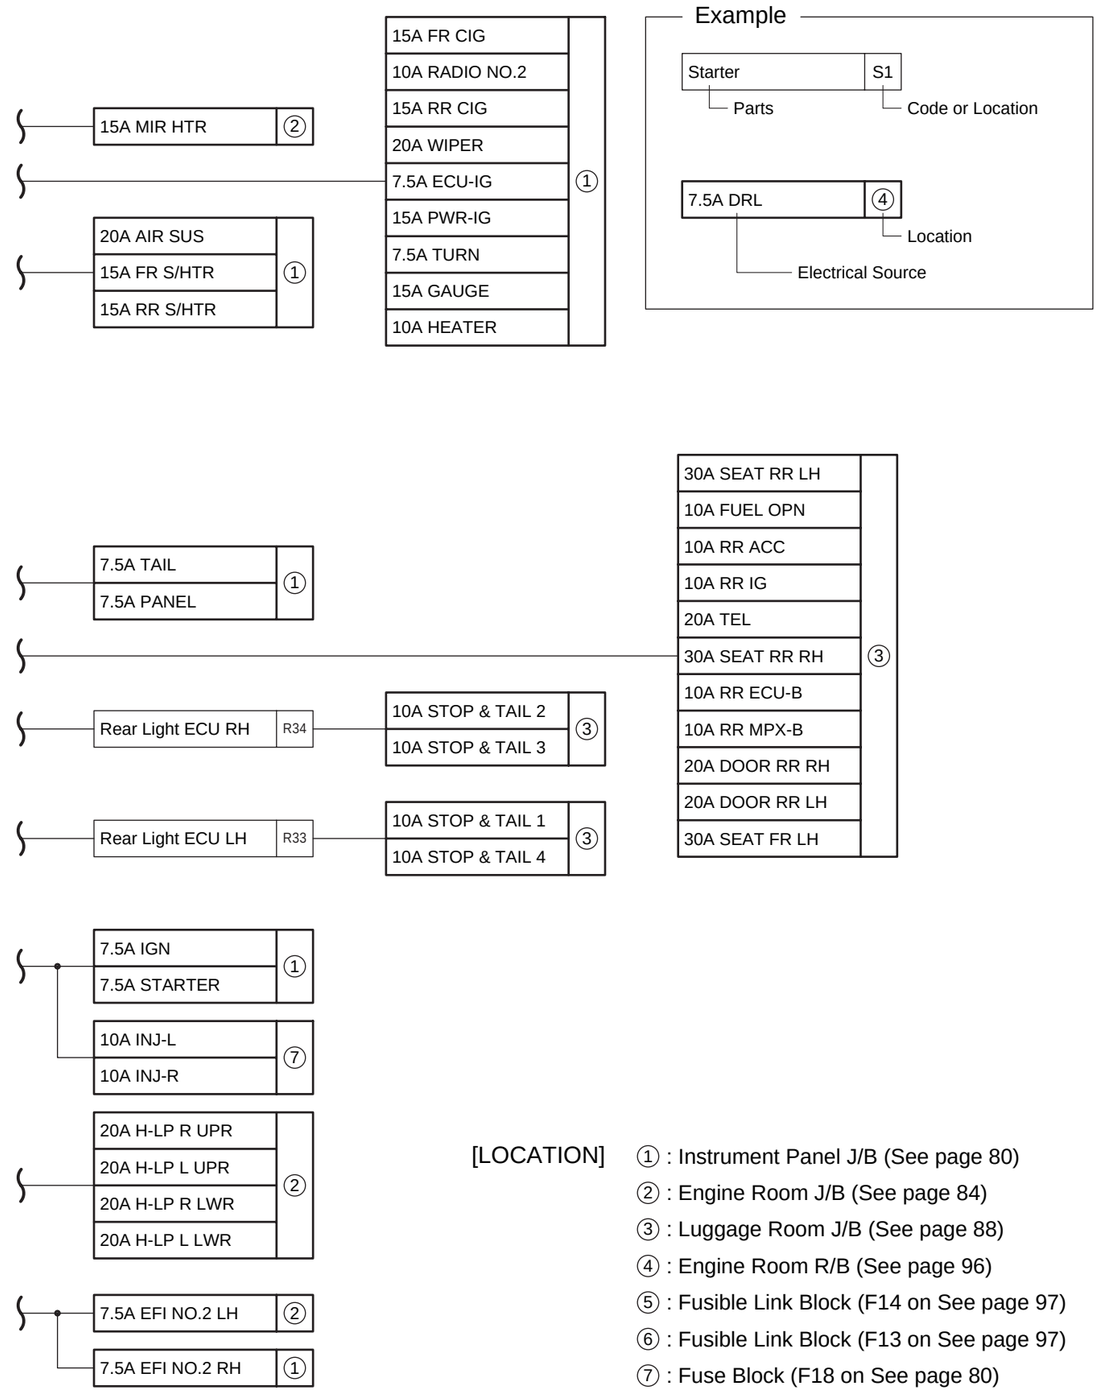

[LOCATION]
① : Instrument Panel J/B (See page 80)
② : Engine Room J/B (See page 84)
③ : Luggage Room J/B (See page 88)
④ : Engine Room R/B (See page 96)
⑤ : Fusible Link Block (F14 on See page 97)
⑥ : Fusible Link Block (F13 on See page 97)
⑦ : Fuse Block (F18 on See page 80)