FUEL LID OPENER SYSTEM

BE0GF–04
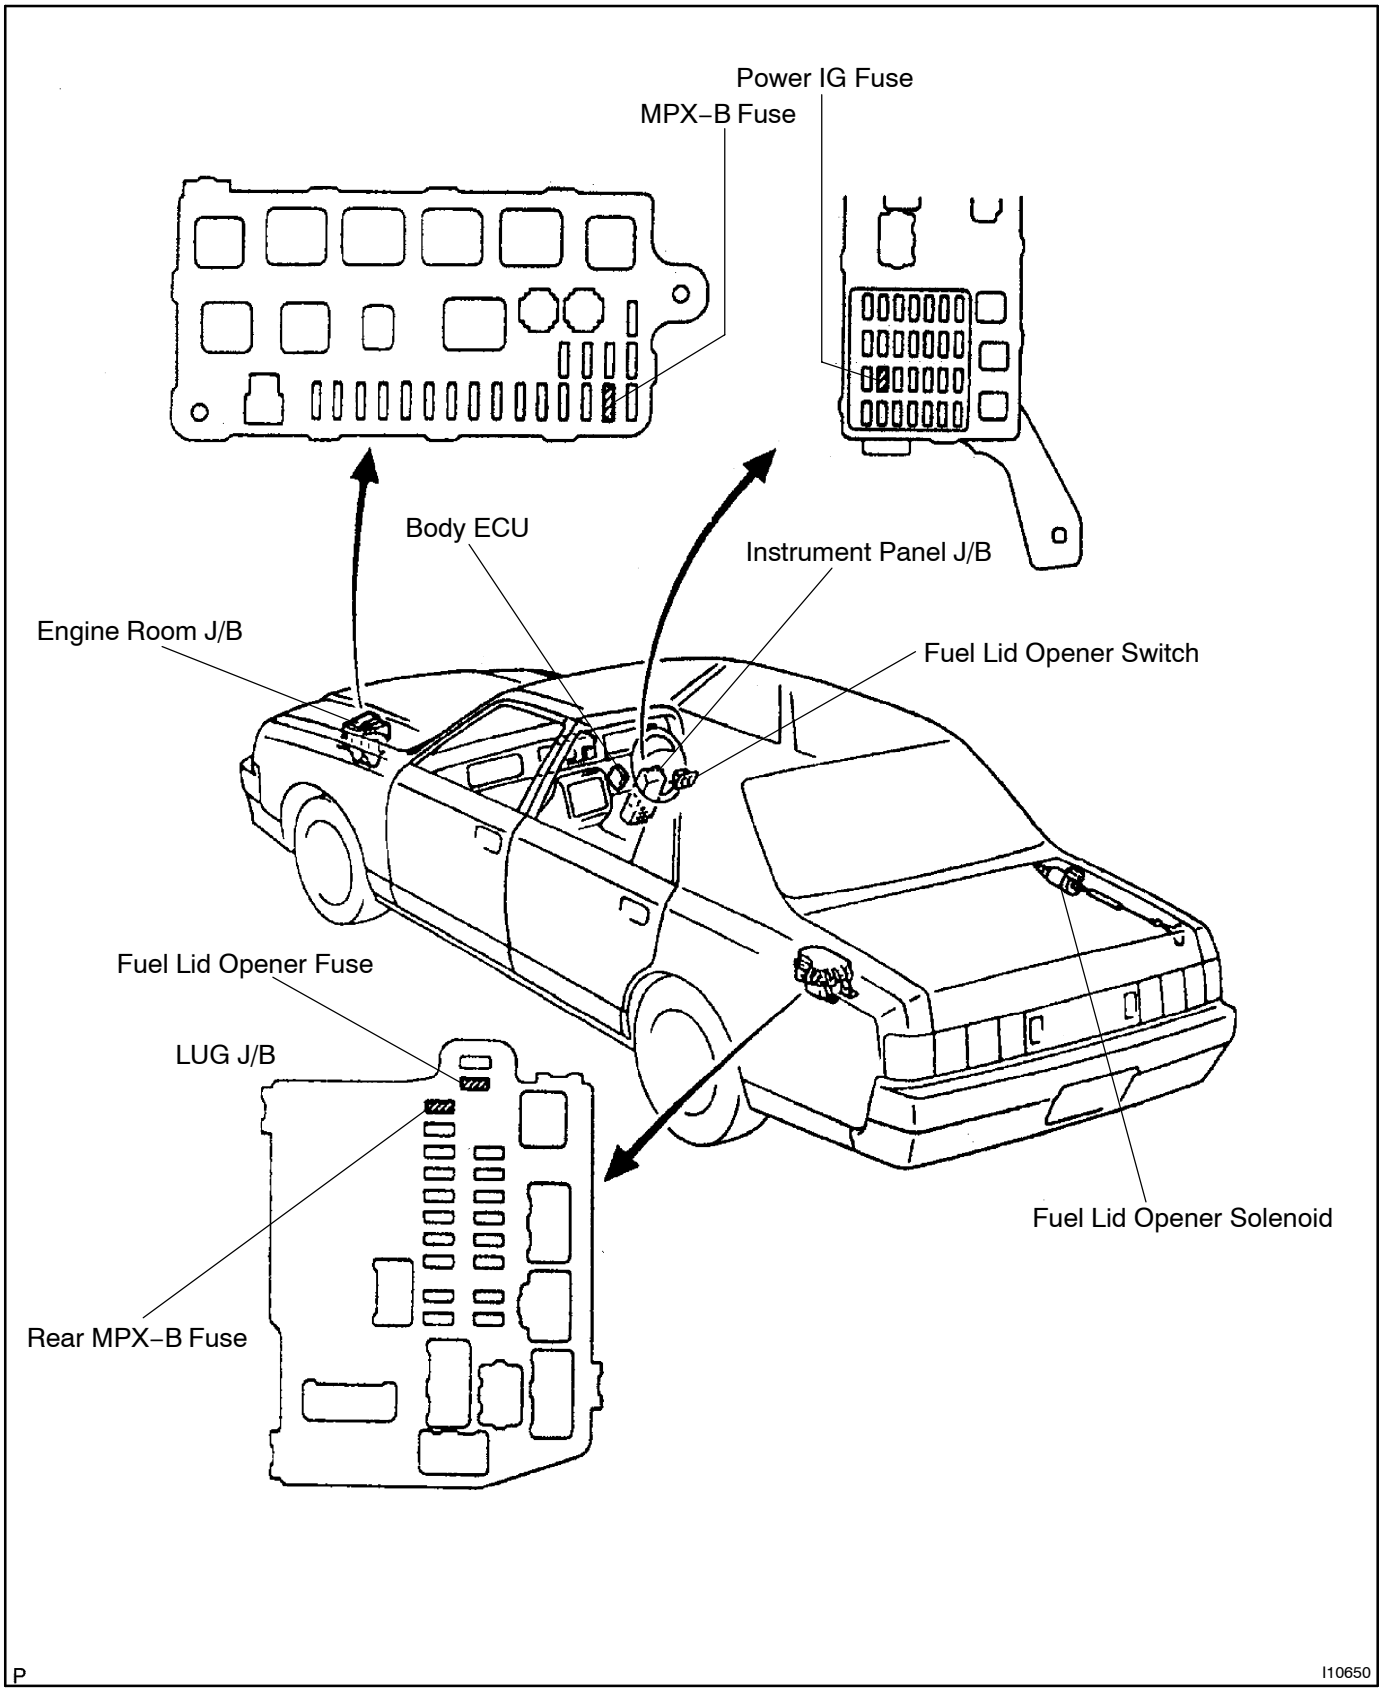
LOCATION